

# System Trace User's Guide


Release 02.2025

# System Trace User's Guide

TRACE32 Online Help

TRACE32 Directory

TRACE32 Index

<b>TRACE32 Documents</b>	
<b>System Trace User's Guide</b>	<b>1</b>
<b>History</b>	<b>7</b>
<b>Introduction</b>	<b>8</b>
<b>Installation</b>	<b>10</b>
Software Installation	10
Hardware Installation	10
CombiProbe-ARM (LA-4502)	10
PowerTrace II (LA-769x) + AutoFocus II Preprocessor for ARM (LA-7992)	11
<b>Utilization of the STM</b>	<b>12</b>
Start-up Script	12
Example STP Data to Onchip Buffer	12
Example STP Data to Parallel Trace Interface	13
Example Attach to Onchip Trace	14
Example Save/Load STP Data Embedded in CoreSight Trace Stream	14
<b>STM Component - Configuration of TRACE32</b>	<b>15</b>
SYStem.CONFIG.STM	Inform TRACE32 about STM component 15
SYStem.CONFIG.STM.Mode	STPv2 timestamp format 17
SYStem.CONFIG.STM.Type	Configure STM type in TRACE32 18
<b>STM Component - General Target Configuration</b>	<b>19</b>
STM	Configure STM component on target 19
STM.FilterMasters	Display specified masters only 20
STM.FilterChannels	Display specified channels only 20
STM.Init	Initialize trace hardware 21
STM.OFF	Switch STM off 21
STM.ON	Switch STM on 21
STM.PortEndianness	Select port endianness 22
STM.PortMode	Select STM port modes 23
STM.PortRoute	Select output of STP data 24
STM.PortSize	Port size in bits 25
STM.PrintfTraceFormat	Define format of printftrace style messages 26
STM.Register	Display STM register 26
STM.RESet	Reset STM settings 27

STM.SetMaster	Set master ID manually	27
STM.state	Display STM settings	28
STM.SyncTime	Trace decoder resync time	29
STM.SyncPeriod	Add synchronization packets	29
STM.TimeStamps	Enables timestamps	29
STM.TimeStampCLOCK	Configure debugger for STM timestamp clock	30
<b>STM Component - TI specific Target Configuration .....</b>		<b>31</b>
STM.HWMasters	Enable hardware masters for tracing	31
STM.IdleCount	Maximum idle packets	31
STM.IgnoreHeader	Ignore leading dword in printfttrace message	32
STM.SWMasters	Enable software masters for tracing	32
STM.OCPAutoidle	Set OCP idle clock behavior	33
STM.PATTERN	Enable test pattern generator	33
STM.ChannelRepeat	Period of channel packet insertion	34
STM.MasterRepeat	Period of master packet insertion	34
<b>STM Component - CoreSight specific Target Configuration .....</b>		<b>35</b>
STM.DMArequests	DMA requests enable	35
STM.COMPression	Data compression enable	35
STM.EventMASK	Mask hardware event inputs	36
STM.PortMASK	Mask stimulus ports	36
STM.TraceID	Sets trace ID	37
STM.TracePriority	Set priority for STM manually	37
<b>STM&lt;trace&gt; - Trace Data Analysis .....</b>		<b>38</b>
STM<trace>	Command groups for STM<trace> recording and analysis	38
Overview STM<trace>		38
STMAalyzer	Analyze STM data recorded by TRACE32 PowerTrace	39
STMCAalyzer	Analyze STM data recorded by TRACE32 CombiProbe	40
STMHAnalyzer	Display and analyze STM data recorded by the host	41
STMLA	Display and analyze STM data from binary file	41
STMONchip	Display and analyze STM data stored on target memory	42
STMTrace	Method-independent display and analysis of STM trace data	43
<b>PrintfTrace .....</b>		<b>45</b>
PrintfTrace	Decoder for STP-based software messages	45
<b>CMI Component .....</b>		<b>48</b>
SYStem.CONFIG.CMI	Inform TRACE32 about CMI component	48
CMI	Configure CMI component on target	49
CMI.EnableMessage	Enables event or activity message generation	50
CMI.Mode	Set event or activity mode	51
CMI.OFF	Switch CMI off	51
CMI.ON	Switch CMI on	51
CMI.Register	Display the CMI register	52
CMI.RESet	Resets CMI settings to their defaults	52

CMI.SamplingWindow	Sampling window	53
CMI.SamplingWindow.CLock	Set sampling window ratio	53
CMI.SamplingWindow.Size	Set sampling window size	53
CMI.state	Display CMI settings	54
CMI Example		55
CMITrace	Display and analyze CMI trace data	56
<b>CMN Component .....</b>		<b>58</b>
SYStem.CONFIG.CMN	Inform TRACE32 about CMN component	58
CMN	Configure CMN component on target	60
CMN.CycleAccurate	Enable cycle counter information	61
CMN.EnhancedFilter	Set an individual filter on a CMN XP	62
CMN.Init	Initialize CMN on target	63
CMN.MPAM	MPAM format of CMN tracking messages	64
CMN.NodeID	Set global filter for xp target or source	65
CMN.OFF	Switch CMN trace off	66
CMN.ON	Switch CMN trace on	66
CMN Opcode	Set global filter for opcode	66
CMN.PortRoute	Select output of CMN data	67
CMN.Register	Display CMN register	67
CMN.RESet	Reset CMN settings	68
CMN.state	Display CMN settings	68
CMN.SyncPeriod	Set period of synchronisation packet	69
CMN.TimeStampCLOCK	Configure debugger for CMN timestamp clock	69
CMN.TimeStampPeriod	Set period of timestamp packet	69
CMN.TraceChannel	Set global filter for CMN channel	70
CMN.TraceID	Sets trace ID	70
CMN.TracePriority	Set priority for CMN manually	70
CMN.VERsion	CMN type	71
CMN Example		72
CMNTrace	Display and analyze CMN trace data	73
<b>CPTracer Component .....</b>		<b>76</b>
CPTracer	Configure CPTracer component on target	76
CPTracer.RESet	Resets CPT settings to their defaults	77
CPTracer.state	Display CPT settings	77
CPTracer.TraceID	Set ATB ID	79
CPTracer.<aggregator>.ON	Switch aggregator on	79
CPTracer.<aggregator>.OFF	Switch aggregator off	79
CPTracer.<aggregator>.SYNC	Sync period of aggregator	80
CPTracer.<aggregator>.<probe>.ADDRESSLOW	Lower filter address	80
CPTracer.<aggregator>.<probe>.ADDRESSHIGH	Upper filter address	81
CPTracer.<aggregator>.<probe>.CHANNEL	Filter by channel ID	81
CPTracer.<aggregator>.<probe>.DIRECTION	Filter by transfer direction	81
CPTracer.<aggregator>.<probe>.OPCODE	Filter by opcode	82

CPTracer.<aggregator>.<probe>.Operation	Mode of operation	82
CPTracer.<aggregator>.<probe>.PERiod	Set period of sample window	83
CPTracer.<aggregator>.<probe>.RouteID	Filter by route ID	83
CPTracer Example		84
CPTracerTrace	Display and analyze CPT trace data	85
<b>OCP Component .....</b>		<b>87</b>
SYStem.CONFIG.OCP	Inform TRACE32 about OCP component	87
OCP	Configure OCP component on target	88
OCP.AutoIDLE	OCP-WP clocking strategy	89
OCP.DebugPort	Select target to be traced	89
OCP.OFF	Switch OCP off	89
OCP.ON	Switch OCP on	90
OCP.Register	Display OCP registers	90
OCP.RESet	Reset OCP settings to their defaults	90
OCP.state	Display OCP settings	91
OCP.TraceFilter	Set filter criteria	92
OCP.TraceFilter<x>.NAME	Name a filter	92
OCP.TraceFilter<x>.MCmd	Filters traffic by transaction type	92
OCP.TraceFilter<x>.Initiator	Filters traffic by transaction initiator	93
OCP.TraceFilter<x>.REQinfo	Filters traffic by transaction qualifier	93
OCP.TraceEnable	Filter OCP traffic by address range	94
OCP.TraceOFF	Stop tracing	94
OCP.TraceON	Start tracing	95
OCP.TriggerOut<x>	Generate trigger event	95
OCPTrace	Display and analyze OCP trace data	96
<b>PMI Component .....</b>		<b>97</b>
SYStem.CONFIG.PMI	Inform TRACE32 about PMI component	97
PMI	Configure PMI component on target	98
PMI.EnableMessage	Enables event message generation	99
PMI.OFF	Switch PMI off	99
PMI.ON	Switch PMI on	100
PMI.Register	Display the PMI registers	100
PMI.RESet	Resets PMI settings to their defaults	100
PMI.SamplingWindow	Sampling window	101
PMI.SamplingWindow.CLock	Set sampling window clock	101
PMI.SamplingWindow.Size	Set sampling window size	101
PMI.state	Display PMI settings	102
PMI Example		103
PMITrace	Display and analyze PMI trace data	104
<b>StatCol Component (Statistics Collector) .....</b>		<b>106</b>
SYStem.CONFIG.SC	Inform TRACE32 about StatCol component	106
StatCol	Configure StatCol component on target	107

StatCol.RESet	Resets all statistics collector settings to their default	108
StatCol.state	Display statistics collector settings	108
StatCol.<probe>.OFF	Switch probe off	109
StatCol.<probe>.ON	Switch probe on	109
StatCol.<probe>.REQuestEVENt	Select event detector	110
StatCol.<probe>.ReSPonseEVENt	Select event detector	111
StatCol.<probe>.CollectTime	Set up collection period	111
StatCol.<probe>.Counter	Counter configuration	112
StatCol.<probe>.Counter <counter> ADDRMAX	Filter max address	112
StatCol.<probe>.Counter <counter> ADDRMIN	Filter min address	112
StatCol.<probe>.Counter <counter> ADDRn	Enable address filtering	113
StatCol.<probe>.Counter <counter> EventInfo	Select 'EventInfo' to count	113
StatCol.<probe>.Counter <counter> MAX	Set max threshold for events	114
StatCol.<probe>.Counter <counter> MIN	Set min threshold for events	114
StatCol.<probe>.Counter <counter> SELEct	Set counter input	115
StatCol.<probe>.Counter <counter> Filter	Set filter criteria	116
StatCol.<probe>.Counter <counter> Filter <filter> MUX	Input port	117
StatCol.<probe>.Counter <counter> Filter <filter> OFF	Switch filter off	117
StatCol.<probe>.Counter <counter> Filter <filter> ON	Switch filter on	117
StatCol.<probe>.Counter <counter> FunCTioN	Predefined settings	118
OFF		118
AvgPayloadLength		119
THRoughput		119
LnkOcc		119
ArbConf		120
TransUflow		120
IBusy		120
HistPayloadLen		121
HistPresDist		121
HistLatDist		121
AvgLatDist		122
StatCol Example		123
StatColTrace	Display and analyze StatCol trace data	124
<b>Generic Subcommands, Parameters, and Options</b>		<b>125</b>
SYStem.CONFIG.<component>.<generic>		125
SYStem.CONFIG.<component>.Base	Base address of a component	126
SYStem.CONFIG.<component>.Name	Name of a component	126
SYStem.CONFIG.<component>.RESet	Reset of a component	126
SYStem.CONFIG.<component>.view	Display component settings	127
<b>FAQ</b>		<b>127</b>

## History

---

- 31-Dec-2024 New command [CPTrace.<aggregator>.<probe>.OPCODE](#).
- 06-Nov-2023 New command [SYStem.CONFIG.CMN.DEViceName](#).
- 31-Oct-2022 New command [CMN.CycleAccurate](#).
- 29-Sept-2022 New command [CMN.TimeStampCLOCK](#).
- 31-Aug-2022 New commands [CMN.MPAM](#) and [CMN.VERsion](#).

Generally speaking a system trace is a hardware module on a SoC which enables the developer to output predefined hardware or software messages without affecting the run-time behavior of the system.

This manual covers the following system trace implementations:

1. The System Debug Trace Interface (SDTI) by Texas Instruments used in OMAP34xx devices
2. The System Trace Module (STM) by Texas Instruments used in OMAP44xx devices
3. The System Trace Macrocell (STM) by ARM as a CoreSight component

**Due to the various implementations some commands and setup routines apply to a certain type of system trace only. While setup routines and implementation specific commands will be handled in separate sections (TI specific or CoreSight specific), some common commands differ in the number of available arguments or in the meaning of the arguments.**

**These differences will be marked as follows:**

- **SDTI (TI) for Texas Instruments' SDTI implementation.**
- **STM (TI) for Texas Instruments' STM implementation.**
- **STM (CS) for the CoreSight implementation.**

**Arguments not available for a specific implementation will be marked as 'n.a.' - not applicable.**

Another difference between those implementations is the trace protocol: SDTI (TI) outputs data in XTlv2 format, STM (TI) in STPv1, and STM (CS) in STPv2.

**To simplify matters the term “STP = System Trace Protocol” will be used in the following.**

STM (TI) and STM (CS) in turn offer the opportunity to route trace data to an Embedded Trace Buffer (ETB, also a CoreSight component), while SDTI (TI) does not. Reading from the ETB only requires an ARM debugger, no trace hardware modules like CombiProbe or PowerTrace. All sections/commands referring to that ETB will contain the word 'onchip' in any way.

The second way of exporting STP data is a dedicated trace port. For STM (CS) this trace port is called 'Trace Port Interface Unit, TPIU' (again a CoreSight component), for STM (TI) and SDTI (TI) this trace port is called 'Parallel Trace Interface, PTI'. In the following, the general term “trace port” will be used for both interfaces.



## Terminology

This section describes the usage of the terms *component* and *module* in this manual.

<b>Component</b>	<p>The term <i>component</i> is used as an umbrella term for anything you can configure using (a) the <b>SYStem.CONFIG.state /COmponents</b> window or (b) a command group specifically designed for a component.</p> <p><b>Example:</b> The <b>STM</b> command group for the <b>STM</b> component.</p> <p>A component's actual function on a SoC can be characterized as:</p> <ul style="list-style-type: none"><li>• Trace source or</li><li>• Trace sink or</li><li>• Funnel</li><li>• etc.</li></ul> <p><b>Example:</b> The STM component you configure in TRACE32 is an STM trace source on the SoC.</p>
<b>Module</b>	<p>The term <i>module</i> is primarily reserved for the hardware modules of TRACE32, such as PowerTrace, PowerDebug, CombiProbe.</p>

## Preconditions

This manual assumes that the **In-Circuit Debugger is already installed**. You should be familiar with the features of the debugger. If you are not yet familiar with the debugger, refer to [“TRACE32 Installation Guide”](#) (installation.pdf).

## Purpose of this Manual

The purpose of this manual is to get your trace running, to write a PRACTICE script (\*.cmm) that does the necessary start-up procedure and to make you familiar with the main features of the trace. All list of all commands that are specific for the TRACE32-ICD trace for the C166 family can be found at the end of this manual.

## Command Syntax

The TRACE32 commands are not case sensitive. In this tutorial, we use upper case letters for the characters that are necessary for the short form of the command entry. E.g. **Analyzer.List** can be shortened to **A.L.**

## Where can I get more information?

TRACE32 provides a detailed online help offering the most current description of all debug features.

1. In TRACE32 choose **Help** menu > **Contents**.
2. See also [Online Help](#) for a brief overview of the online help.

# Installation

---

## Software Installation

---

The TRACE32-ICD software for the ARM debugger also includes the STM trace support. No extra software installation for the STM trace is required.

## Hardware Installation

---

### CombiProbe-ARM (LA-4502)

---

1. Simply attach the CombiProbe to your debugger.
2. Plug the header into the target's trace connector (or target adaption, if required).



## PowerTrace II (LA-769x) + AutoFocus II Preprocessor for ARM (LA-7992)

---

1. Attach the debug cable to the debugger.
2. Connect the 'PODBUS EXPRESS OUT' port of the debugger to the "PODBUS EXPRESS IN" port of PowerTrace II.
3. Plug the preprocessor's flat cables into the according connectors of PowerTrace II: The shortest cable to the connector labelled 'A', the middle to connector 'B' and the longest to connector 'C'.
4. Connect the debug cable header to the target's JTAG port (or target adaption, if required).
5. Connect the preprocessor's MICTOR connector (labelled 'TRACE A') to the target's trace port (or target adaption, if required).



# Utilization of the STM

---

## Start-up Script

---

### Example STP Data to Onchip Buffer

---

Target: OMAP4430

<b>NOTE:</b> This example applies to the STM by Texas Instruments only.
---

```
; Clock definition
Trace.CLOCK 100MHz                                ; Optional: If not defined,
                                                    ; only raw timestamps will
                                                    ; be displayed.

STM.RESet

; Route STP data to ETB
STM.PortRoute ONCHIP                              ; If ETM was on, it will be
                                                    ; disabled here.

; !!!!!!!! Important !!!!!!!!                    ; If AutoArm remain on, several
Onchip.AutoArm OFF                                ; final trace bytes will be
                                                    ; missing.

; Turn on STM component
STM.ON

; Manually enable the ETB
Onchip.Arm

...

; Don't forget to disable the ETB
afterwards!
Onchip.OFF
```

## Example STP Data to Parallel Trace Interface

---

Target: OMAP4430

<b>NOTE:</b> This example applies to the STM by Texas Instruments only.
---

```
; Define STP data format
SYStem.CONFIG.STM STP           ; This will unlock the STM
                                ; commands.

STM.RESet

; Route STP data to PTI
STM.PortRoute CAnalyzer

; Pad configuration              ; Multiplex emu[0:4] signals to
                                ; dpm_emu[0:4] pads or multiplex
                                ; emu[15:19] signals to dpm_emu[15:19]
                                ; pads. You can even do both.

; dpm_emu[0:4]
Data.Set ahb:0x4a1001ac %long    Data.Long(ahb:0x4a1001ac)&0xffff
Data.Set ahb:0x4a1001b0 %long    0
Data.Set ahb:0x4a1001b4 %long    0

; dpm_emu[15:19]
Data.Set ahb:0x4a1001cc %long    0
Data.Set ahb:0x4a1001d0 %long    0
Data.Set ahb:0x4a1001d4 %long    0

; Configure & init CombiProbe
CAnalyzer.THreshold 0.9
CAnalyzer.Init

; Turn on STM component
STM.ON
```

## Example Attach to Onchip Trace

---

**NOTE:** This example applies to CoreSight compliant STMs only.

```
; Setup target
SYStem.CPU <cpu>
SYStem.CONFIG <config>
...                               ; Do not attach to the target yet!

SystemTrace.Method Onchip

Onchip.TraceConnect <buffer>

SYStem.Attach

Onchip.Disable

Onchip.Attach

SystemTrace.List
```

## Example Save/Load STP Data Embedded in CoreSight Trace Stream

---

**NOTE:** This following examples assume that the target has been set up properly beforehand.

Save file:

```
Trace.Export.TracePort <file>      Save in binary file format
```

Load file:

```
TPIU.PortMode WRAPPED

CoreSightTrace.METHOD LA

SystemTrace.METHOD LA

LA.IMPORT.TracePort <file>

LA.IMPORT.StartValid

SystemTrace.List
```

Format:	<b>SYStem.CONFIG.STM</b> [<instance>] <sub_cmd>
<instance>:	<b>1   2</b>
<sub_cmd>:	<generic>   <component_specific>
<component_specific>:	<b>ACCESS</b> [Denied   ReadWrite] <b>Type</b> <type> <b>Mode</b> <mode> <b>AutoSync</b> [ON   OFF]

Default: Device specific.

Provides essential information about the STM (manufacturer, protocol, etc.) to TRACE32. Usually this step is already included in the CPU selection.

<instance>	For a description of <instance>, refer to the introduction to the command group <b>STM</b> .
<generic>	For descriptions of the generic subcommands, click <a href="#">here</a> .
<b>STM</b>	Single STM. If the chip contains more than one STM, the individual STM can be addressed by adding a number to the keyword <b>STM</b> , i.e. <b>STM1</b> or <b>STM2</b> .
<b>STM1</b>	Same as STM command. Used to differentiate between <b>STM1</b> and <b>STM2</b> .
<b>STM2</b>	Used to configure a 2nd STM, if present.
<b>ACCESS</b> [Denied   ReadWrite]	Only if <b>SYStem.CONFIG.STM.Type</b> is set to <b>ARM</b> . Set this property to <b>Denied</b> if TRACE32 is not supposed to write to the configuration registers of an STM. Default: ReadWrite.
<b>AutoSync</b> [ON   OFF]	If <b>ON</b> , TRACE32 tries to synchronize to the trace stream even if no synchronization packets can be found. This setting only has an effect for STP version >= 2. Default: ON.

<b>Mode</b> <mode>	For details, see <a href="#">SYStem.CONFIG.STM.Mode</a> .
<b>Type</b> <type>	For details, see <a href="#">SYStem.CONFIG.STM.Type</a> .

**Example 1:**

```
SYStem.CONFIG STM Mode STP64           ; chip contains a STM that uses
                                         ; MIPI STPv1 (D64) protocol

STM.state                               ; open STM configuration window
```

**Example 2:**

```
SYStem.CONFIG STM1 Mode STPv2          ; chip contains a STM that uses
                                         ; MIPI STPv2 protocol

STM1.state                             ; open STM1 configuration window

SYStem.CONFIG STM2 Mode STPv2          ; chip contains a second STM that
                                         ; uses MIPI STPv2 protocol

STM2.state                             ; open STM2 configuration window
```

**See also**

- [SYStem.CONFIG.STM.Mode](#) ■ [SYStem.CONFIG.STM.Type](#) ■ [SYStem.CONFIG](#)
- ▲ 'Generic Subcommands, Parameters, and Options' in 'System Trace User's Guide'



Format:	<b>SYStem.CONFIG.STM.Mode</b> <mode>
<mode>:	<b>STP   STP64   STPv2</b> [2   3   4]

Default: Device specific.

Informs TRACE32 that the chip contains a System Trace Module. The TRACE32 command group **STM** will be enabled as a result.

<b>STP</b>	STP protocol (MIPI STPv1, D32 packets)
<b>STP64</b>	STP64 protocol (MIPI STPv1, D64 packets)
<b>STPv2</b> [2   3   4]	STPv2 protocol (MIPI STPv2).

STP version 2 (STPv2) offers the possibility to output timestamps in different formats. Usually the device specific format will be set up by TRACE32 automatically during CPU selection.

The STPv2 mode allows you to set up the timestamp format manually afterwards, if necessary.

<b>2</b>	<b>NATDELTA</b> Natural binary delta timestamp; timestamp counter is reset after each timestamp packet.
<b>3</b>	<b>NAT</b> Natural binary absolute timestamp; free running timestamp counter.
<b>4</b>	<b>GRAY</b> Gray encoding of free running counter.

See also

■ [SYStem.CONFIG.STM](#)

Format:	<b>SYStem.CONFIG.STM.Type</b> <type>
<type>:	<b>None</b>   <b>Generic</b>   <b>ARM</b>   <b>SDTI</b>   <b>TI</b>

Configures the STM type in TRACE32.

<b>None</b>	No STM type is configured in TRACE32.
<b>Generic</b> (default)	STM component is generic.
<b>ARM</b>	System Trace Macrocell (STM) by ARM as a CoreSight component
<b>SDTI</b>	System Debug Trace Interface (SDTI) by Texas Instruments
<b>TI</b>	System Trace Module (STM) by Texas Instruments

See also


■ [SYStem.CONFIG.STM](#)

Format:	<b>STM</b> [<instance>].<sub_cmd>
<instance>:	<b>1</b>   <b>2</b>

The **STM**<instance> command group is used to configure the STM trace source.

<b>1</b>	Instance of the STM trace source 1. Most targets have only one STM trace source. For these targets, the commands <b>STM</b> .<sub_cmd> and <b>STM1</b> .<sub_cmd> are aliases. This means, if you are configuring a target with only one STM trace source, you may omit the instance number <b>1</b> .
<b>2</b>	Instance of the STM trace source 2. Some targets have two STM trace sources. For these targets, you must include the instance numbers <b>1</b> or <b>2</b> .
<sub_cmd>	For a description of the subcommands, refer to the command descriptions in this chapter.

For configuration, use the TRACE32 command line, a PRACTICE script (\*.cmm), or the **STM.state** window.

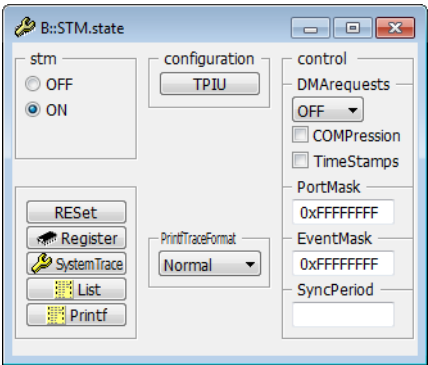

To display and analyze the recorded trace data, use the **STM**<trace> command groups.

### See also

- |   |                                     |                                    |                                      |
|---|-------------------------------------|------------------------------------|--------------------------------------|
| ■ <a href="#">STM.ChannelRepeat</a>     | ■ <a href="#">STM.COMpression</a>   | ■ <a href="#">STM.DMARequests</a>  | ■ <a href="#">STM.EventMASK</a>      |
| ■ <a href="#">STM.FilterChannels</a>    | ■ <a href="#">STM.FilterMasters</a> | ■ <a href="#">STM.HWMasters</a>    | ■ <a href="#">STM.IdleCount</a>      |
| ■ <a href="#">STM.IgnoreHeader</a>      | ■ <a href="#">STM.Init</a>          | ■ <a href="#">STM.MasterRepeat</a> | ■ <a href="#">STM.OCPAutIdle</a>     |
| ■ <a href="#">STM.OFF</a>               | ■ <a href="#">STM.ON</a>            | ■ <a href="#">STM.PATTERN</a>      | ■ <a href="#">STM.PortEndianness</a> |
| ■ <a href="#">STM.PortMASK</a>          | ■ <a href="#">STM.PortMode</a>      | ■ <a href="#">STM.PortRoute</a>    | ■ <a href="#">STM.PortSize</a>       |
| ■ <a href="#">STM.PrintfTraceFormat</a> | ■ <a href="#">STM.Register</a>      | ■ <a href="#">STM.RESet</a>        | ■ <a href="#">STM.SetMaster</a>      |
| ■ <a href="#">STM.state</a>             | ■ <a href="#">STM.SWMasters</a>     | ■ <a href="#">STM.SyncPeriod</a>   | ■ <a href="#">STM.SyncTime</a>       |
| ■ <a href="#">STM.TimeStampCLOCK</a>    | ■ <a href="#">STM.TimeStamps</a>    | ■ <a href="#">STM.TraceID</a>      | ■ <a href="#">STM.TracePriority</a>  |
| ■ <a href="#">SystemTrace</a>           |                                     |                                    |                                      |

- ▲ 'STM' in 'Legacy Release History'
- ▲ 'STM Component - CoreSight specific Target Configuration' in 'System Trace User's Guide'
- ▲ 'STM Component - TI specific Target Configuration' in 'System Trace User's Guide'
- ▲ 'STM<trace> - Trace Data Analysis' in 'System Trace User's Guide'

## STM.FilterMasters

Display specified masters only

Format: **STM[*<instance>*].FilterMasters** *<id1>* *<id2>* *<id3>* *<id4>*

Select up to four STM master IDs, which associated trace packets will be displayed in the trace results. All other STM packets will be masked out.

This command actually does not filter STM packets but only affects the display. After the filter has been reset, all STM packets will be shown. The filter is reset via **STM.FilterMasters** (without any ID specified).

### See also

- [STM](#)
- [STM.state](#)

## STM.FilterChannels

Display specified channels only

Format: **STM[*<instance>*].FilterChannels** *<id1>* *<id2>* *<id3>* *<id4>*

Selects up to four STM channels, which will be displayed in the trace results. All other channels will be masked out.

This command actually does not filter STM packets but only affects the display. After the filter has been reset, all STM packets will be shown. The filter is reset via **STM.FilterChannels** (without any ID specified).

### See also

- [STM](#)
- [STM.state](#)

Format: **STM[<instance>].Init**

The trace hardware is initialized and set to its defaults.

### See also

■ [STM](#)

■ [STM.state](#)

## STM.OFF

## Switch STM off

Format: **STM[<instance>].OFF**

Disables the STM functionality.

### See also

■ [STM](#)

■ [STM.state](#)

## STM.ON

## Switch STM on

Format: **STM[<instance>].ON**

Enables the STM functionality.

### See also

■ [STM](#)

■ [STM.state](#)

Format:           STM[<instance>].PortEndianness [Big | Little]

Default: Big.

If **STM.PortSize** is > 8, this command determines the byte order of the trace port.

**Big**                               MSB mapped to lower port bits.

**Little**                            MSB mapped to upper port bits.

See also

- [STM](#)
- [STM.state](#)

Format:	STM[<instance>].PortMode <mode>
<mode>:	Continuous Gated Autoldle Bypass Continuous HalfRate FullRate 1/<divisor>

	SDTI (TI)	STM (TI)	STM (CS)
Continuous	n.a.	Port clock remains active even if no STP data are available (default).	n.a.
Gated	n.a.	Port clock is stopped if no STP data are available.	n.a.
Autoldle	n.a.	Disables the Parallel Trace Interface (PTI) if no STP data are available (power saving).	n.a.
HalfRate	STP data are sampled on rising edge of port clock.	STP data are sampled on rising edge of port clock.	n.a.
FullRate	STP data are sampled on rising and falling edge of port clock.	STP data are sampled on rising and falling edge of port clock.	n.a.
1/<divisor>	The port clock rate is defined as ratio of OCP clock.	The port clock rate is defined as ratio of OCP clock.	n.a.
Bypass	n.a.	n.a.	n.a.
Wrapped	n.a.	n.a.	n.a.

For STM (CS): [ETM.PortMode](#).

See also

- [STM](#)
- [STM.state](#)

Format:STM[<instance>].PortRoute [AUTO | Analyzer | CAnalyzer | Onchip]

	SDTI (TI)	STM (TI)	STM (CS)
AUTO	Data are directed to the Parallel Trace Interface (PTI) and recorded by the attached trace hardware (default).	Data are directed to the Parallel Trace Interface (PTI) and recorded by the attached trace hardware (default).	n.a.
Analyzer	Data are directed to the Parallel Trace Interface (PTI) and recorded by the PowerTrace II / PowerTrace III.	Data are directed to the Parallel Trace Interface (PTI) and recorded by the PowerTrace II / PowerTrace III.	n.a.
CAnalyzer	Data are directed to the Parallel Trace Interface (PTI) and recorded by the CombiProbe.	Data are directed to the Parallel Trace Interface (PTI) and recorded by the CombiProbe.	n.a.
Onchip	n.a.	Data are directed to the Embedded Trace Buffer.	n.a.

For STM (CS): [ETM.PortRoute](#).

See also

- [STM](#)
- [STM.state](#)



Format:           STM[<instance>].PortSize [1 | 1E | 1X | 2 | 2E | 2X | 4 | 4E | 4X | 8 | 12 | 16]

Default: 4

For SDTI (TI), STM (TI): Defines the number of parallel data pins of the trace port. Also the internal signal multiplexing of the Debug Resource Manager (DRM) is affected by this command. Please refer to the table below:

	no suffix (standard configura- tion)	suffix 'X' (to be used with LA- xxxx)	suffix 'E' (to be used with LA- 3812)	suffix 'Z'	suffix 'K' (to be used for Keystone devices)
stm_clk	emu19	emu2	emu2	emu0	emu10
stm_data[0]	emu18	emu3	emu0	emu1	emu0
stm_data[1]	emu17	emu4	emu1	emu2	emu1
stm_data[2]	emu16	emu5	emu3	emu3	emu2
stm_data[3]	emu15	emu6	emu4	emu4	emu3

**The trace signals are routed to emu signal lines only, not to the physical pads of the device!  
Refer to the example script of this manual of how to configure the pads!**

For STM (CS): [ETM.PortSize](#).

See also

- STM
- [STM.state](#)

Format:

STM[<instance>].PrintfTraceFormat [Normal | Kernel]

Default: Normal.

- Normal
- String messages as described in section [Software Messages](#)
- Kernel
- Special string and FTRACE message format as described in [Software Messages](#)

See also

- STM
- STM.state

STM.Register

Display STM register

Format:

STM[<instance>].Register [<file>] [/<option>]

<option>:

SpotLight | DualPort | Track | AlternatingBackGround  
CORE <core\_number>

Displays the STM registers.

- <option>
- For a description of the options, see [PER.view](#).

See also

- STM
- STM.state

Format:

STM[<instance>].RESet

All STM settings are reset to their defaults.

See also

- STM
- STM.state

STM.SetMaster


Set master ID manually

Format:

STM[<instance>].SetMaster <master\_id>

High-level STP messages from hardware modules (see [CMI](#), [PMI](#)) or [Software Messages](#) must be preceded by an STP master packet in order to be decoded correctly in the according trace list window. If no master packet could be found the message will be marked as “unknown”.

However, by setting <master\_id> manually the trace decoder assigns any unknown STP packets to the specified master until a valid STP master packet is found in the trace stream.

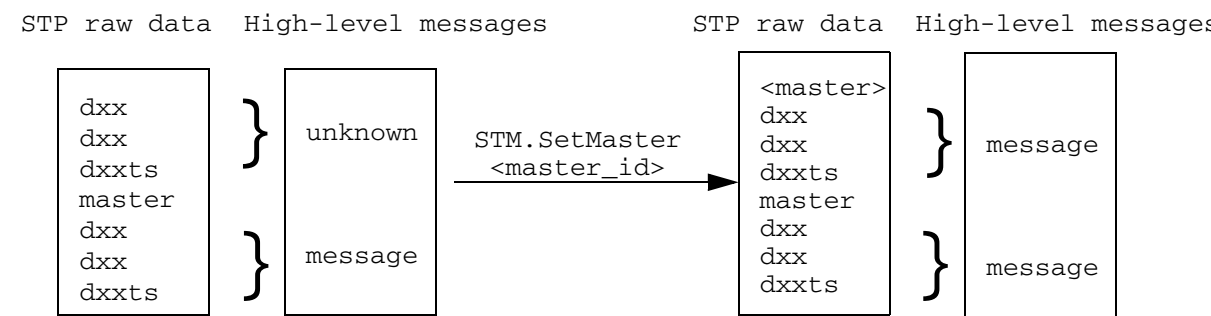

See also

- STM
- STM.state

Format:


STM[<instance>].state

<instance>:

1 | 2

Opens the **STM.state** window, where you can configure the STM trace source.

The commands available in the window differ depending on the selected CPU. Commands that are not available for a certain CPU are hidden.

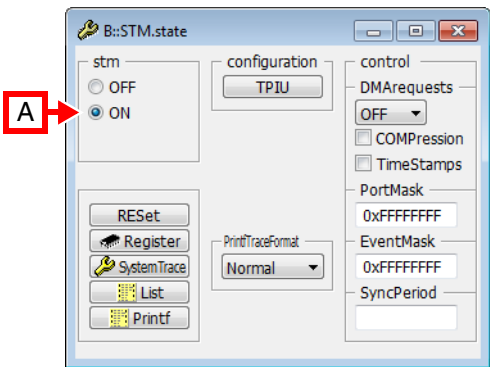

- A** For descriptions of the commands in the **STM.state** window, please refer to the **STM.\*** commands in this chapter.
- Example:** For information about **ON**, see [STM.ON](#).

**Exceptions:**

- The **SystemTrace** button opens the **SystemTrace.state** window, see [<trace>.state](#). For more information, refer to the description of the [SystemTrace](#) command group.
- The **List** button opens the **SystemTrace.List** window, see [<trace>.List](#).
- The **Printf** button opens the **PrintfTrace.List** window, see [<trace>.List](#). For more information, refer to the description of the [PrintfTrace](#) command group.
- The **TPIU** button opens the **TPIU** window, see [TPIU.state](#).

<instance>	For a description of <instance>, refer to the introduction to the command group <a href="#">STM</a> .
------------	---

**See also**

<a href="#">STM</a>	<a href="#">STM.ChannelRepeat</a>	<a href="#">STM.COMPression</a>	<a href="#">STM.DMARequests</a>
<a href="#">STM.EventMASK</a>	<a href="#">STM.FilterChannels</a>	<a href="#">STM.FilterMasters</a>	<a href="#">STM.HWMasters</a>
<a href="#">STM.IdleCount</a>	<a href="#">STM.IgnoreHeader</a>	<a href="#">STM.Init</a>	<a href="#">STM.MasterRepeat</a>
<a href="#">STM.OCPAutoIdle</a>	<a href="#">STM.OFF</a>	<a href="#">STM.ON</a>	<a href="#">STM.PATTERN</a>
<a href="#">STM.PortEndianness</a>	<a href="#">STM.PortMASK</a>	<a href="#">STM.PortMode</a>	<a href="#">STM.PortRoute</a>
<a href="#">STM.PortSize</a>	<a href="#">STM.PrintTraceFormat</a>	<a href="#">STM.Register</a>	<a href="#">STM.RESet</a>
<a href="#">STM.SetMaster</a>	<a href="#">STM.SWMasters</a>	<a href="#">STM.SyncPeriod</a>	<a href="#">STM.SyncTime</a>
<a href="#">STM.TimeStampCLOCK</a>	<a href="#">STM.TimeStamps</a>	<a href="#">STM.TraceID</a>	<a href="#">STM.TracePriority</a>

Format:STM[<instance>].SyncTime <time>

Time after which a resync is forced in the trace decoder.

See also

- STM
- STM.state

STM.SyncPeriod

Add synchronization packets

Format:STM[<instance>].SyncPeriod [<value>]

Default: 0

Inserts synchronization packets (ASYNC + VERSION) periodically into the trace stream approximately each <value> bytes. If <value> is zero, no synchronization packets will be generated.  
This command is only applicable to STPv2 compliant System Trace implementations!

See also

- STM
- STM.state

STM.TimeStamps

Enables timestamps

Format:STM[<instance>].TimeStamps [ON | OFF]

Default: OFF.

Enables or disables timestamp generation in the trace hardware.

See also

- STM
- STM.state

Format: **STM**[<instance>].**TimeStampCLOCK** <frequency>

Default: 0

Configures the debugger for the STM timestamp clock frequency of the target. The frequency is required to calculate timing information based on timestamp packets.

---

**See also**

■ [STM](#)

■ [STM.state](#)

STM.HWMasters

Enable hardware masters for tracing

Format:

STM[<instance>].HWMasters <name> [ON | OFF]

Available <names> are device specific. If the corresponding hardware master is disabled, write accesses of the master to the STM will be ignored.

Default values

SDTI: N. a.

STM: All off

See also

- STM
- STM.state

STM.IdleCount

Maximum idle packets

Format:

STM[<instance>].IdleCount <count>

If there are no STP packets to be sent, <count> number of idle packets are emitted by the PTI. Depending on the port mode (STM.PortMode Continuous or STM.PortMode Gated), the PTI then stops or continues emitting idle packets. If the same HW master or the same SW master + channel resumes sending STP messages, a leading master packet is generated by the STM.

See also

- STM
- STM.state

Format:STM[<instance>].IgnoreHeader [ON | OFF]

Default: OFF.

Newer versions of the TI CToolsLib generate a leading 32-bit word in front of the printftrace message. If not ignored, this header will produce some strange characters at the beginning of the message in the **PrintfTrace.List** window.

See also

- STM
- STM.state

STM.SWMasters

Enable software masters for tracing

Format:STM[<instance>].SWMasters <name> [ON | OFF]

Available <names> are device specific. If the corresponding software master is disabled, writes of that master to a stimulus port will have no effect.

Default values

SDTI: CU1 = ON, CPU2 = ON, Debugger = OFF

STM: Device dependent

See also

- STM
- STM.state



Format:STM[<instance>].OCPAutoldle [ON | OFF]

- OFF (default)OCP clock is free running.
- ONOCP clock may be gated if interface is in idle mode.

See also

- STM
- STM.state

STM.PATTERN

Enable test pattern generator

Format:STM[<instance>].PATTERN <pattern>

If <pattern> in nonzero, the selected test pattern is output instead of STP messages.

See also

- STM
- STM.state

Format:	STM[<instance>].ChannelRepeat [OFF   <value>]
<value>:	8   16   24   32   40   48   56   64   72   80   104   112   120

- OFF (default)

No extra channel packets are inserted into the STP data stream.
- <value>

If <value> subsequent STP messages are written to the same software channel, an extra STP channel packet is inserted into the data stream. Due to the working load of the STM component it may happen that extra channel packets are inserted only every 2 \* <value> packets from the same channel.

This option is only available if STP data are routed to the onchip buffer: [STM.PortRoute.Onchip](#).

See also

- [STM](#)
- [STM.state](#)

Format:	STM[<instance>].MasterRepeat [OFF   <value>]
<value>:	8   16   24   32   40   48   56   64   72   80   104   112   120

- OFF (default)

No extra master packets are inserted into the STP data stream.
- <value>

If <value> subsequent STP packets are generated by the same master, an extra STP master packet is inserted into the data stream. Due to the working load of the STM component it may happen that extra master packets are inserted only every 2 \* <value> packets from the same master.

This option is only available if STP data are routed to the onchip buffer: [STM.PortRoute.Onchip](#).

See also

- [STM](#)
- [STM.state](#)

## STM.DMArequests

DMA requests enable

Format: STM[<instance>].DMArequests [OFF | 25% | 50% | 75% | 100%]

Default: OFF.

The STM can request the DMA to write to the stimulus ports. Requests in turn are only issued if the internal STM FIFO contains less data than the stated filling level. This command does not set up the DMA.

See also

- STM
- STM.state

## STM.COMPRESSION

Data compression enable

Format: STM[<instance>].COMPRESSION [ON | OFF]

Default: OFF.

Enables or disables the automatic data compression of the STM. E.g. with compression enabled a 32-bit packet (D32) will be converted into an 8-bit packet (D8) if the value written to a stimulus port is less than 256.

See also

- STM
- STM.state

Format:                **STM[<instance>].EventMASK <mask>**

Default: 0xFFFFFFFF

This 32-bit mask enables or disables hardware event inputs for packet generation. Thereby the LSB of the mask corresponds to hardware event input #0, the MSB corresponds to hardware event input #31.

See also

- [STM](#)
- [STM.state](#)

Format:                **STM[<instance>].PortMASK <mask>**

Default: 0xFFFFFFFF

This 32-bit mask enables or disables stimulus ports for instrumentation; that is if a bit of the mask is cleared, writes accesses to the corresponding stimulus port will not result in the generation of STP packets. Thereby the LSB of the mask corresponds to stimulus port #0, the MSB corresponds to stimulus port #31.

See also

- [STM](#)
- [STM.state](#)

Format:           **STM[<instance>].TraceID** <id> | <id\_start>--<id\_end>

Default: 0x11

Sets the trace ID of the STM. To decode traces from multiple STM instances, define an ID range.

<id_start>	Must be an even number.
------------	-------------------------

See also

- [STM](#)
- [STM.state](#)

STM.TracePriority

Set priority for STM manually

Format:           **STM[<instance>].TracePriority** <priority>

TRACE32 automatically assigns an appropriate priority to the STM. This command allows the user to change the priority for the STM trace information.

See also

- [STM](#)
- [STM.state](#)

## STM<trace> Command groups for STM<trace> recording and analysis

See also

- STMAAnalyzer
- STMOnchip
- STMCAnalyzer
- STMTrace
- STMHAnalyzer
- STMLA
- ▲ 'STM Component - General Target Configuration' in 'System Trace User's Guide'

## Overview STM<trace>

[\[Example\]](#)

Using the **STM<trace>** command groups, you can configure the trace recording as well as analyze and display the recorded STM trace data. The command groups consist of the name of the trace source, here **STM**, plus the TRACE32 trace method you have chosen for recording the STM trace data.

For more information about the TRACE32 convention of combining *<trace\_source>* and *<trace\_method>* to a *<trace>* command group that is aimed at a specific trace source, see [“Replacing <trace> with Trace Source and Trace Method - Examples”](#) (general\_ref\_t.pdf).

Not any arbitrary combination of *<trace\_source>* and *<trace\_method>* is possible. For an overview of the available command groups [“Related Trace Command Groups”](#) (general\_ref\_t.pdf).

Example:

```
STMTrace.state           ;optional step: open the window in which the
                        ;trace recording is configured.
STMTrace.METHOD Analyzer ;select the trace method Analyzer for
                        ;recording trace data.
;<your_configuration>

STM.state                ;optional step: open the window in which
                        ;the STM trace source is configured.
STM.ON                   ;switch STM trace source on
;<your_configuration>

;trace data is recorded using the commands Go, WAIT, Break

STMTrace.List            ;display a trace listing of the STM trace data
                        ;recorded with the trace method Analyzer.
                        ;STMTrace.List is the generic replacement
                        ;for the command used below:
STMAAnalyzer.List        ;this is the equivalent and explicit command.
```

**NOTE:**

In the example above, the output of **STMTrace.List** is the same as the output of **STMAAnalyzer.List**.

STMAAnalyzer

Analyze STM data recorded by TRACE32 PowerTrace

[\[Example\]](#)

Format:

**STMAAnalyzer.<sub\_cmd>** [<stm\_channel>...] [<channel>...]

The **STMAAnalyzer** command group allows to display and analyze the information emitted by the system trace implementations listed in the **“Introduction”**, page 8.

The STM information is emitted off-chip via:

- The Trace Port Interface Unit (TPIU), which is configured with the **TPIU** command group.
- Or the Parallel Trace Interface (PTI), which is configured with the **STM** command group.

The emitted STM information is recorded by the TRACE32 PowerTrace.

<sub_cmd>	<div>For descriptions of the subcommands, please refer to the general &lt;trace&gt; command descriptions in <b>“General Commands Reference Guide T”</b> (general_ref_t.pdf).</div> <div><b>Example:</b> For a description of <b>STMAAnalyzer.List</b>, refer to <b>&lt;trace&gt;.List</b></div>
<stm_channel>, <channel>	<div>For information about the channels, see <b>STMTrace</b>.</div>

See also

- [STM<trace>](#)
- ▲ [‘STM Component - General Target Configuration’ in ‘System Trace User’s Guide’](#)

Format:STMCAalyzer.<sub\_cmd> [<stm\_channel>...] [<channel>...]

The **STMCAalyzer** command group allows to display and analyze the information emitted by the system trace implementations listed in the **“Introduction”**, page 8.

The STM information is emitted off-chip via:

- The Trace Port Interface Unit (TPIU), which is configured with the **TPIU** command group.
- Or the Parallel Trace Interface (PTI), which is configured with the **STM** command group.
- Or via Serial Wire Output (SWO), which is also configured with the **TPIU** command group.

The emitted STM information is recorded by the TRACE32 CombiProbe.

<sub_cmd>	<p>For descriptions of the subcommands, please refer to the general &lt;trace&gt; command descriptions in <b>“General Commands Reference Guide T”</b> (general_ref_t.pdf).</p> <p><b>Example:</b> For a description of <b>STMCAalyzer.List</b>, refer to <b>&lt;trace&gt;.List</b></p>
<stm_channel>, <channel>	<p>For information about the channels, see <b>STMTrace</b>.</p>

See also

- [STM<trace>](#)
- ▲ [‘STM Component - General Target Configuration’ in ‘System Trace User’s Guide’](#)



Format:

STMHAnalyzer.<sub\_cmd> [<stm\_channel>...] [<channel>...]

The **STMHAnalyzer** command group allows to display and analyze the information emitted by the system trace implementations listed in the **“Introduction”**, page 8.

Trace data is transferred off-chip via the USB port and recorded in the trace memory of the TRACE32 host analyzer.

<sub_cmd>	For descriptions of the subcommands, please refer to the general <trace> command descriptions in <b>“General Commands Reference Guide T”</b> (general_ref_t.pdf).  <b>Example:</b> For a description of <b>STMHAnalyzer.List</b> , refer to <trace>.List
<stm_channel>, <channel>	For information about the channels, see <b>STMTrace</b> .

See also

- [STM<trace>](#)
- ▲ [‘STM Component - General Target Configuration’](#) in ‘System Trace User’s Guide’

STMLA

Display and analyze STM data from binary file

Format:

STMLA.<sub\_cmd> [<stm\_channel>...] [<channel>...]

<sub_cmd>	For descriptions of the subcommands, please refer to the general <trace> command descriptions in <b>“General Commands Reference Guide T”</b> (general_ref_t.pdf).  <b>Example:</b> For a description of <b>STMLA.List</b> , refer to <trace>.List
<stm_channel>, <channel>	For information about the channels, see <b>STMTrace</b> .

See also

- [STM<trace>](#)
- ▲ [‘STM Component - General Target Configuration’](#) in ‘System Trace User’s Guide’

Format:	<b>STMONchip.</b> <sub_cmd> [<stm_channel>...] [<channel>...] <b>STMONchip2.</b> <sub_cmd> [<stm_channel>...] [<channel>...]
---------	---

The **STMONchip** command group allows to display and analyze the information emitted by the system trace implementations listed in the **“Introduction”**, page 8.

The STM trace is sent to the device-specific onchip trace memory.

<sub_cmd>	For descriptions of the subcommands, please refer to the general <trace> command descriptions in <b>“General Commands Reference Guide T”</b> (general_ref_t.pdf).  <b>Example:</b> For a description of <b>STMONchip.List</b> , refer to <trace>.List
<stm_channel>, <channel>	For information about the channels, see <b>STMTrace</b> .

See also

- [STM<trace>](#)
- ▲ 'STM Component - General Target Configuration' in 'System Trace User's Guide'

Format:	<b>STMTrace.</b> <i>&lt;sub_cmd&gt;</i> [ <i>&lt;stm_channel&gt;...</i> ] [ <i>&lt;channel&gt;...</i> ]
<i>&lt;stm_channel&gt;</i> :	<b>STMTITS   STMMASTER   STMCHANNEL</b>

The **STMTrace** command group can be used as a generic replacement for the above **STM<trace>** command groups.

<i>&lt;sub_cmd&gt;</i>	<p>For descriptions of the subcommands, please refer to the general <i>&lt;trace&gt;</i> command descriptions in <a href="#">“General Commands Reference Guide T”</a> (general_ref_t.pdf).</p> <p><b>Example:</b> For a description of <b>STMTrace.List</b>, refer to <i>&lt;trace&gt;.List</i></p>
------------------------	---

<i>&lt;stm_channel&gt;</i>	The following, additional channels are available for the analysis of STP trace data:
<b>STPTITS</b>	Displays raw timestamp information of DxxTS messages.  Only for TI Onchip traces.
<b>STPV1TS</b>	Display raw timestamp information of timestamped packets.  Only for MIPI based STPv1 traces.
<b>STPV2TS</b>	Display raw timestamp information of timestamped packets.  Only for MIPI based STPv2 traces.
<b>STMMASTER</b>	Displays the master ID of each message.
<b>STMCHANNEL</b>	Displays the channel ID of each message.

<i>&lt;channel&gt;</i>	For a description of the default channels, see <i>&lt;trace&gt;.List ... &lt;items&gt;</i> .
------------------------	--

**STMMASTER** and **STMCHANNEL** information can only be displayed if a master or channel message has been stored in the ETB prior to the current message. Otherwise the corresponding column will remain empty.

**Example 1:** The recommended way to display STP data generated by the STM:

```
STMTrace.List STMMASTER STMCHANNEL CYcle Data Time.Back
```

**Example 2:** In case of TI, the recommended way to display STP onchip data is:

```
STMTrace.List STMMASTER STMCHANNEL CYcle Data STMTITS Time.Back
```

---

#### See also

■ [STM<trace>](#)

▲ ['STM Component - General Target Configuration'](#) in ['System Trace User's Guide'](#)

Format:                   **PrintfTrace.<sub\_cmd>**

Applications running on a CPU may use the System Trace to output 'printf'-style software messages. The trace output can be displayed or analyzed with the **PrintfTrace** command group. Three different message types are available:

- [String messages](#)
- [Kernel log messages](#)
- [Kernel FTRACE messages](#)

<sub_cmd>	For descriptions of the subcommands, please refer to the general <trace> command descriptions in <b>“General Commands Reference Guide T”</b> (general_ref_t.pdf).  <b>Example:</b> For a description of <b>PrintfTrace.List</b> , refer to <b>&lt;trace&gt;.List</b>
-----------	--

String messages

String messages in general start with a data packet and are terminated by a time-stamped data packet or FLAG packet. Depending on the STP version being used, the PrintfTrace decoder decodes a STP software message as follows:

	STPv1	STPv2
Start of message	D8, D16, D32, D64	D4, D8, D16, D32, D64
Message body	D8, D16, D32, D64	D4, D8, D16, D32, D64
End of message	D8TS, D16TS, D32TS, D64TS	D4TS, D8TS, D16TS, D32TS, D64TS FLAG

## Kernel log messages

Similar format as string messages, except that messages are initiated by a timestamped packet and terminated by a FLAG packet:

	STPv1	STPv2
<b>Start of message</b>		D4TS, D8TS, D16TS, D32TS, D64TS
<b>Message body</b>		D4, D8, D16, D32, D64
<b>End of message</b>		FLAG

In order to differentiate between regular string and kernel messages, [STM.PrintfTraceFormat Kernel](#) must be used.

## Kernel FTRACE messages

These messages resemble a simple flow trace based on function calls with a source and target address. They always start with a D32TS packet which' lower 16bit data must be 0x0001. The message body consists of 3 D32 packets, followed by a FLAG packet:

	STPv1	STPv2
<b>Start of message</b>	n.a.	D32TS (0x????0001)
<b>Process ID</b>	n.a.	D32
<b>Target address</b>	n.a.	D32
<b>Source address</b>	n.a.	D32
<b>End of message</b>	n.a.	FLAG

In order to differentiate between regular string and kernel FTRACE messages, [STM.PrintfTraceFormat Kernel](#) must be used.

The following signals are relevant for all three types of software messages:


<b>MESSAGE&gt;</b>	<ul style="list-style-type: none"><li>- Decoded normal string</li><li>- FTRACE target function</li><li>- Decoded kernel log</li></ul>
<b>sYmbol</b>	Fully translated FTRACE source function
<b>sYmbolN</b>	FTRACE source function
<b>PID</b>	FTRACE process ID
<b>STMMASTER</b>	Master ID of software message.
<b>STMCHANNEL</b>	Channel ID of software message.

### Example

---

```
; Example of full trace listing for kernel messages  
  
PrintfTrace.List STMMASTER STMCHANNEL pid sYmbolN MESSAGE
```

# CMI Component



## SYStem.CONFIG.CMI

Inform TRACE32 about CMI component

[\[Process Overview\]](#)

Format:

**SYStem.CONFIG.CMI***<instance>.<sub\_cmd>*

*<instance>*:

**1 | 2**

*<sub\_cmd>*:

*<generic> | <component\_specific>*

*<component\_specific>*:

**TraceID** *<id>*

If the CMI is not enabled for your specific device, use the following commands for configuration. Both, the base address and the ID must be set in order to enable the CMI.

<i>&lt;generic&gt;</i>	For descriptions of the generic subcommands, click <a href="#">here</a> .
<b>1</b>	Instance of the primary CMI component.
<b>2</b>	Instance of the secondary CMI component.
<b>TraceID</b> <i>&lt;id&gt;</i>	Sets the ATB trace ID of the corresponding CMI component.

**Example:**

```
SYStem.CONFIG.CMI1.Base      AHB:0x4A004F00
SYStem.CONFIG.CMI1.TraceID   0xf8
```

**See also**

- [CMI](#)
- ▲ 'Generic Subcommands, Parameters, and Options' in 'System Trace User's Guide'




Format:
**CMI**<instance>.<sub\_cmd>

<instance>:
**1 | 2**

The Clock Management component monitors clock activity and component activity of other components on the OMAP4. For more detailed information refer to the OMAP4 ETRM available from [https://www-a.ti.com/extranet/programs/emulation/OMAP4\\_ETRM\\_2.0-Setup.exe](https://www-a.ti.com/extranet/programs/emulation/OMAP4_ETRM_2.0-Setup.exe).

1	Instance of the primary CMI component.
2	Instance of the secondary CMI component.
<sub_cmd>	For a description of the subcommands, refer to the command descriptions in this chapter.

For configuration of the primary or secondary CMI component, use the TRACE32 command line, a PRACTICE script (\*.cmm), or the **CMI1.state** or **CMI2.state** window.

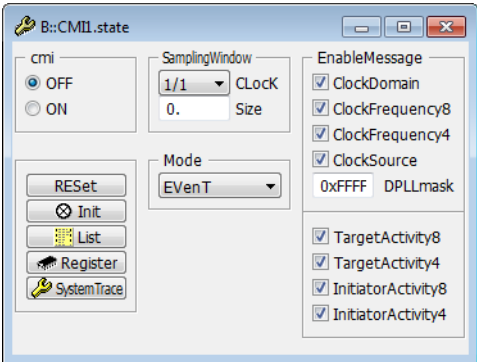

To display and analyze the recorded trace data, use the **CMITrace** command group.

**See also**

- [CMI.EnableMessage](#)  
■ [CMI.Register](#)  
■ [CMITrace](#)

■ [CMI.Mode](#)  
■ [CMI.RESet](#)  
■ [SYSTEM.CONFIG.CMI](#)

■ [CMI.OFF](#)  
■ [CMI.SamplingWindow](#)  
☐ [CMIBASE\(\)](#)

■ [CMI.ON](#)  
■ [CMI.state](#)

Format:	<b>CMI</b> <i>&lt;instance&gt;</i> . <b>EnableMessage</b> . <i>&lt;message&gt;</i> [ON   OFF]	
<i>&lt;message&gt;</i> :	<b>ClockDomain</b>	(event message)
	<b>ClockFrequency8</b>	(event message)
	<b>ClockFrequency4</b>	(event message)
	<b>ClockSource</b>	(event message)
	<b>DPLLmask</b>	(event message)
	<b>TargetActivity8</b>	(activity message)
	<b>TargetActivity4</b>	(activity message)
	<b>InitiatorActivity8</b>	(activity message)
	<b>InitiatorActivity4</b>	(activity message)

Default: OFF.

Event messages are emitted for all clock domains derived from the same Digital Phase-Locked Loop (DPLL). They are only emitted on state changes and if **CMI***<instance>*.**Mode** **EVeNT** has been selected.

<b>ClockDomain</b>	Trace clock domain state changes (on / off).
<b>ClockFrequency8</b>	Trace clock frequency changes (8-bit divider ratio).
<b>ClockFrequency4</b>	Trace clock frequency changes (4-bit divider ratio).
<b>ClockSource</b>	Trace clock source selection changes (MUX input).
<b>DPLLmask</b>	Trace DPLL setting changes. Each of the 16 lower bits of DPLLmask represents one DPLL.

The following activity messages contain the active cycles count of the target or initiator. They are emitted on a periodically basis, even if the debugger in a halted state. Activity monitoring must be enabled via **CMI***<instance>*.**Mode** **ACTivity** in addition.

<b>TargetActivity8</b>	Count target activity cycles. (If <b>CMI</b> <i>&lt;instance&gt;</i> . <b>SamplingWindow.Size</b> >= 16)
<b>TargetActivity4</b>	Count target activity cycles. (If <b>CMI</b> <i>&lt;instance&gt;</i> . <b>SamplingWindow.Size</b> < 16)
<b>InitiatorActivity8</b>	Count initiator activity cycles. (If <b>CMI</b> <i>&lt;instance&gt;</i> . <b>SamplingWindow.Size</b> >= 16)
<b>InitiatorActivity4</b>	Count initiator activity cycles. (If <b>CMI</b> <i>&lt;instance&gt;</i> . <b>SamplingWindow.Size</b> < 16)

See also

- CMI
- CMI.state

Format:

CMI<instance>.Mode [EVeNT | ACTivity]

<b>EVeNT</b> (default)	Selects event mode monitoring.
<b>ACTivity</b>	Selects activity mode monitoring.

See also

- [CMI](#)
- [CMI.state](#)

CMI.OFF

Switch CMI off

Format:

CMI<instance>.OFF

Switches the CMI component off.

See also

- [CMI](#)
- [CMI.state](#)

CMI.ON

Switch CMI on

Format:

CMI<instance>.ON

Switches the CMI component on.

See also

- [CMI](#)
- [CMI.state](#)

Format:	<b>CMI</b> <i>&lt;instance&gt;</i> . <b>Register</b> [/ <i>&lt;option&gt;</i> ]
<i>&lt;option&gt;</i> :	<b>SpotLight</b>   <b>DualPort</b>   <b>Track</b>   <b>AlternatingBackGround</b> <b>CORE</b> <i>&lt;core_number&gt;</i>

Displays the CMI registers.

<i>&lt;option&gt;</i>	For a description of the options, see <a href="#">PER.view</a> .
-----------------------	--

See also

- CMI
- CMI.state

CMI.RESet

Resets CMI settings to their defaults

Format:	<b>CMI</b> <i>&lt;instance&gt;</i> . <b>RESet</b>
---------	---

All CMI settings are reset to their defaults.

See also

- CMI
- CMI.state

See also

- [CMI.SamplingWindow.CLock](#)
  - [CMI](#)
- [CMI.SamplingWindow.Size](#)
  - [CMI.state](#)

CMI.SamplingWindow.CLock

Set sampling window ratio

Format:

CMI<instance>.SamplingWindow.CLock <ratio>

Default: 1/1

<ratio>	Divider ratio of the sampling window clock. It is derived from the CMI component's clock. Valid ratios range from 1/1 to 1/16.
---------	---

See also

- [CMI.SamplingWindow](#)

CMI.SamplingWindow.Size

Set sampling window size

Format:

CMI<instance>.SamplingWindow.Size <cycles>

Default: 1

<cycles>	Size of the sampling window. Smaller windows allow for more accurate activity or event reports while bigger sampling windows reduce trace traffic. Valid sizes range from 1 to 256.
----------	---

See also

- [CMI.SamplingWindow](#)

Format:


CMI<instance>.state

<instance>:

1 | 2

Opens the **CMI1.state** and **CMI2.state** window, where you can configure the CMI trace source 1 and 2.

Example of the **CMI1.state** window for the CMI trace source 1:

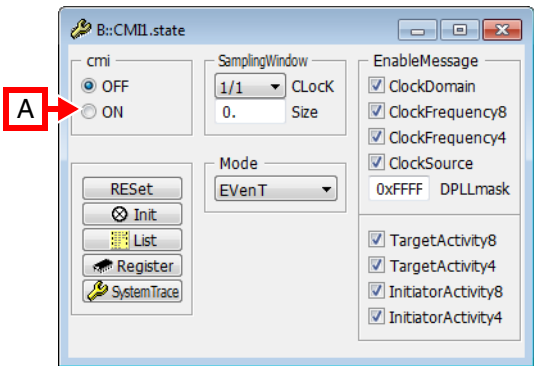

- A** For descriptions of the commands in the **CMI<instance>.state** window, please refer to the **CMI.\*** commands in this chapter.
- Example:** For information about **ON**, click [CMI.ON](#).

**Exceptions:**

- The **List** button opens the **CMITrace.List** window, see [<trace>.List](#). For more information, refer to the description of the [CMITrace](#) command group.
- The **SystemTrace** button opens the **SystemTrace.state** window, see [<trace>.state](#). For more information, refer to the description of the [SystemTrace](#) command group.

<instance>	For a description of <instance>, refer to the introduction to the command group <a href="#">CMI</a> .
------------	---

**See also**

- [CMI](#)  
[CMI.ON](#)
- [CMI.EnableMessage](#)  
[CMI.Register](#)
- [CMI.Mode](#)  
[CMI.RESet](#)
- [CMI.OFF](#)  
[CMI.SamplingWindow](#)

## CMI Example

---

This example for an OMAP4430 which has got two CMI components. In this case the components are addressed as CMI1 or CMI2, respectively.

```
CAAnalyzer.AutoArm OFF           ; In activity mode CMI messages are
                                   ; output permanently, so we

CAAnalyzer.ARM                   ; must arm the CAAnalyzer before
                                   ; the CMI is activated.

CMI1.RESet

CMI1.SamplingWindow.Size 15

CMI1.Mode ACTivity

CMI1.ON

...

CMI1.OFF                         ; Turn off CMI ...

CAAnalyzer.OFF                   ; ... before shutting down
                                   ; the CAAnalyzer.

CMITrace.List CYcle CMITA.<name1> ; Display cycle activity of target
CMITA.<name2>                     ; <name1> and <name2>.
```

Format:	<b>CMITrace.</b> <i>&lt;sub_cmd&gt;</i> [ <i>&lt;cmi_channel&gt;...</i> ] [ <i>&lt;channel&gt;...</i> ]
<i>&lt;cmi_channel&gt;</i> :	<b>CMICD.</b> <i>&lt;domain&gt;</i>   <b>CMIDR.</b> <i>&lt;clock&gt;</i>   <b>CMICS</b> <i>&lt;clock&gt;</i>   <b>CMICR</b> <i>&lt;clock&gt;</i>   <b>CMIDPLL.</b> <i>&lt;setting&gt;</i>   <b>CMITA.</b> <i>&lt;target&gt;</i>   <b>CMIIA.</b> <i>&lt;initiator&gt;</i>   <b>CMISTAT</b>   <b>CMILAT</b>   <b>CYcle</b>

Using the **CMITrace** command group, you can analyze and display the recorded CMI trace data. The command group consists of the name of the trace source, here **CMI**, plus the keyword **Trace** of the *<trace>* command group.

<i>&lt;sub_cmd&gt;</i>	<p>For descriptions of the subcommands, please refer to the general <i>&lt;trace&gt;</i> command descriptions in <a href="#">“General Commands Reference Guide T”</a> (general_ref_t.pdf).</p> <p><b>Example:</b> For a description of <b>CMITrace.List</b>, refer to <i>&lt;trace&gt;.List</i></p>
------------------------	---

<i>&lt;cmi_channel&gt;</i>	The following, additional channels are relevant for the analysis of CMI trace data:
<b>CMICD.</b> <i>&lt;domain&gt;</i>	Clock state of domain <i>&lt;domain&gt;</i>
<b>CMIDR.</b> <i>&lt;clock&gt;</i>	Divider ratio of clock <i>&lt;clock&gt;</i>
<b>CMICR</b> <i>&lt;clock&gt;</i>	Ratio of clock <i>&lt;clock&gt;</i>
<b>CMICS</b> <i>&lt;clock&gt;</i>	Source of clock <i>&lt;clock&gt;</i>
<b>CMIDPLL.</b> <i>&lt;setting&gt;</i>	DPLL setting <i>&lt;setting&gt;</i>
<b>CMITA.</b> <i>&lt;target&gt;</i>	Target <i>&lt;target&gt;</i> activity
<b>CMIIA.</b> <i>&lt;initiator&gt;</i>	Initiator <i>&lt;initiator&gt;</i> activity
<b>CMISTAT</b>	Only applies to event messages: Error flag indicating event message loss(es) caused by an undersized sampling window.
<b>CMILAT</b>	Event messages: Export latency in multiples of the sampling window. Activity messages: Export latency in multiples of target or initiator cycles.
<b>CYcle</b>	Domain name.



<channel>	For a description of the default channels, see <a href="#">&lt;trace&gt;.List ... &lt;items&gt;</a> .
-----------	---


**Example:**

```
; Display cycle activity of target <name1> and <name2>.  
CMITrace.List CYcle CMITA.<name1> CMITA.<name2>
```

**See also**

---

- [CMI](#)



## SYStem.CONFIG.CMN Inform TRACE32 about CMN component

[\[Process Overview\]](#)

Format:	<b>SYStem.CONFIG.CMN</b> <instance>.<sub_cmd>
<instance>:	<b>1   2   3   4</b>
<sub_cmd>:	<generic>   <component_specific>
<component_specific>:	<b>DEviceName</b> <string> <string> <b>RootNodeBase</b> <address> <b>XYBits</b> 2bit   3bit   4bit   2bitEXtra   3bitEXtra   4bitEXtra   0bitEXtra

If the Coherent Mesh Network (CMN) component is not enabled for your specific device, use the following commands for configuration. Please be aware, that a single CMN component represents a so-called Debug Trace Controller (DTC) and not a whole CMN. A DTC is used to set general Trace settings and works as a Trace output interface. For configuration, two addresses are needed. The Base address represents the Debug Trace Controller's configuration register block in your System's memory. On the other hand, the RootNodeBase address represents as starting point for crosspoint (XP) detection, so that you are able to set individual trace filters. If a CMN has more than one DTC, all CMN components must have the same RootNodeBase address.

Furthermore, TRACE32 needs to be informed about the number of bits used to identify the XPs inside the mesh. If this is not done correctly, the component won't work properly.

<instance>	Instance of the current CMN component.
<generic>	For descriptions of the generic subcommands, click <a href="#">here</a> .
<b>DEviceName</b>	Set a device's name that is connected to the mesh via the XP port given in the first string argument. The device's name can be shown in the trace listing window.

**RootNodeBase**

Starting address for CMN crosspoint detection.

**XYBits**

Number of bits used to address the dimension of a single XP inside the mesh network. The “\*bitEXtra” variants should be used with CMNs that support “extra device ports” on a crosspoint.

E.g. In case the network has only one XP, the option “0bitEXtra” should be used.

**Examples:**

```
; Example configuration for a CMN with a single DTC
SYStem.CONFIG.CMN1.Base          AXI:0x50D30000
SYStem.CONFIG.CMN1.RootNodeBase  AXI:0x50D00000
SYStem.CONFIG.CMN1.XYBits        2bit
SYStem.CONFIG.CMN1.DeviceName    "(2,1,0,0)" "Core0"

; Example configuration for a CMN with two DTCs
SYStem.CONFIG.CMN1.Base          AXI:0x31034000
SYStem.CONFIG.CMN1.RootNodeBase  AXI:0x31004000
SYStem.CONFIG.CMN1.XYBits        3bit
SYStem.CONFIG.CMN2.Base          AXI:0x31A34000
SYStem.CONFIG.CMN2.RootNodeBase  AXI:0x31004000
SYStem.CONFIG.CMN2.XYBits        3bit
```

**NOTE:**

Please be aware, that the RootNodeBase address of multiple CMN<instance> components must be the same if they are part of the same network.

If you are unsure about the necessary address values, Lauterbach provides a detection script in the directory: “~/demo/arm/etc/cmn/cmn\_detect.cmm”

**Example:**

```
;The detection script searches for the component IDs of the CMN DTC and
CMN Root Node

DO ~/demo/arm/etc/cmn/cmn_detect.cmm START=AXI:0x50C00000
END=AXI:0x50E00000
```


Format:	<b>CMN</b> <instance>.<sub_cmd>
<instance>:	<b>1   2   3   4</b>

CMN stands for Coherent Mesh Network. It is a scalable configurable coherent interconnect designed by ARM and used in high-end networking and enterprise compute applications. The CMN's Debug and Trace functionality allows for non-intrusive tracing of the messages sent or received at each CMN crosspoint (XP).TRACE32 supports up to 4 independent Debug Trace Controllers inside a single CMN. Though the trace outputs of the independent Debug Trace Controllers can be configured individually, the filters set on the XPs apply to all of them.

<b>1</b>	Instance of the first CMN component.
<b>2</b>	Instance of the second CMN component.
<b>3</b>	Instance of the third CMN component.
<b>4</b>	Instance of the fourth CMN component.
<sub_cmd>	For a description of the subcommands, refer to the command descriptions in this chapter.

Each XP supports following channels: Request (REQ), Response (RSP), Snoop (SNP), and Data (DAT). Furthermore, each XP provides means to filter the traced messages individually. As the CMN is connected to the System's Advanced Trace Bus (ATB), the trace output can be configured similarly to other ARM CoreSight components. For example, the trace can be set up as on-chip trace by using an Embedded Trace Buffer or as off-chip trace by routing the data to a trace port.

For configuration, use the TRACE32 command line, a PRACTICE script (\*.cmm), or the **CMN<instance>.state** window.

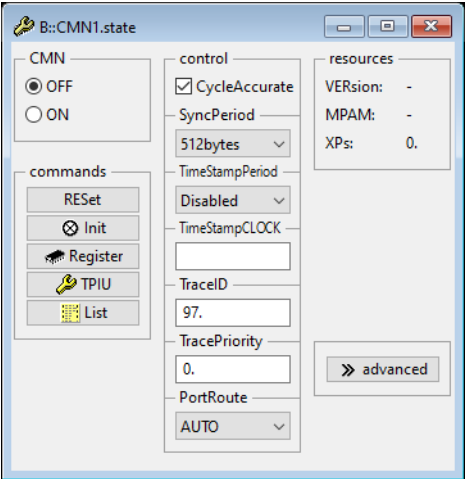

To display and analyze the recorded trace data, use the **CMNTrace** command group.

CMN.CycleAccurate

Enable cycle counter information

[build 153418 - DVD 02/2023]

Format:

CMN<instance>.CycleAccurate [ON | OFF]

Default: ON.

If this flag is set, the recorded trace data will contain timing information in form of 16 bit cycle counter values. These values are then used to precisely determine the timings of the received trace messages. Cycle counter values allow a better precision than global timestamps.

ON	Enable MPAM format.
OFF	Disable MPAM format.

NOTE:

Currently, TRACE32 does not allow the simultaneous use of timestamps and cycle counter values in CMN trace. So either the generation of timestamps or cycle counter information is turned off.

CMN.EnhancedFilter

Set an individual filter on a CMN XP

Format:

CMN<instance>.EnhancedFilter <x\_coord> <y\_coord> <wp\_num> <config>  
<value> <mask>

Configures the filter for a single watchpoint on a single CMN XP. Only the filtered messages are visible to the ATB. For further details, refer to the *Technical Reference Manual* of your system's CMN.

- <x\_coord>

X coordinate of the XP which is configured  
The used value can range from 0. to 7. for CMN-600 and from 0. to 15. for CMN-700 variants.
- <y\_coord>

Y coordinate of the XP which is configured  
The used value can range from 0. to 7. for CMN-600 and from 0. to 15. for CMN-700 variants.
- <wp\_num>

Number of the XP's watchpoint which is configured  
Each XP provides 4 watchpoints, therefore the used value can range from 0. to 3.
- <config>

The value which is written to the selected watchpoint's config register.  
For detailed information refer to the register por\_dtm\_wp<n>\_config in the *Technical Reference Manual* of your system's CMN.

<b>&lt;value&gt;</b>	The comparison value which is written to the selected watchpoint's value register. For detailed information refer to the register <code>por_dtm_wp&lt;n&gt;_val</code> in the <i>Technical Reference Manual</i> of your system's CMN.
<b>&lt;mask&gt;</b>	The comparison mask which is set to the selected watchpoint's mask register. For detailed information refer to the register <code>por_dtm_wp&lt;n&gt;_mask</code> in the <i>Technical Reference Manual</i> of your system's CMN.

#### Example:

```
;The following lines show how to filter REQ flits corresponding to a
"ReadShared" transaction to address=0x12345 uploaded from port 1 at XP
(2,1)
;This can be done by configuring the Watchpoints 0. and 1.

CMN1.EnhancedFilter 2. 1. 0. 0x1941 0x80000000 0xFFFFFFFF07FFFFFFFF
CMN1.EnhancedFilter 2. 1. 1. 0x1911 0x123450 0xFFFF000000000000F

;The following line shows how to filter for all RSP flits downloaded to
port 0 at XP (0,1)

CMN1.EnhancedFilter 0. 1. 2. 0x1902 0x0 0xFFFFFFFFFFFFFFFFF
```

<b>NOTE:</b>	This command resets all global filters which have been set by <a href="#">CMN.NodeID</a> , <a href="#">CMN.Opcode</a> , and <a href="#">CMN.TraceChannel</a> .
--------------	--

## CMN.Init

Initialize CMN on target

Format:	<b>CMN&lt;instance&gt;.Init</b>
---------	---------------------------------

Initializes the CMN registers on the target.

Format:

CMN.MPAM [ON | OFF]

Default: OFF.

Defines the MPAM format of CMN tracking messages.

When using the simulator, the *mpam\_en* bit cannot be used for detection as it would always be 0.

ON	Enable MPAM format.
OFF	Disable MPAM format.




Format:

CMN<instance>.NodeID <xp\_nodeid>  
  
CMN.SourceID (deprecated)

Default: None

This command sets a global filter for flits sent to the specified Node. In case the selected CMN channel is set to SNP, then this value is used to set a global filter for flits, which are sent by the specified Node. The picture below shows the structure of an example CMN with XPs, Nodes and their respective IDs.

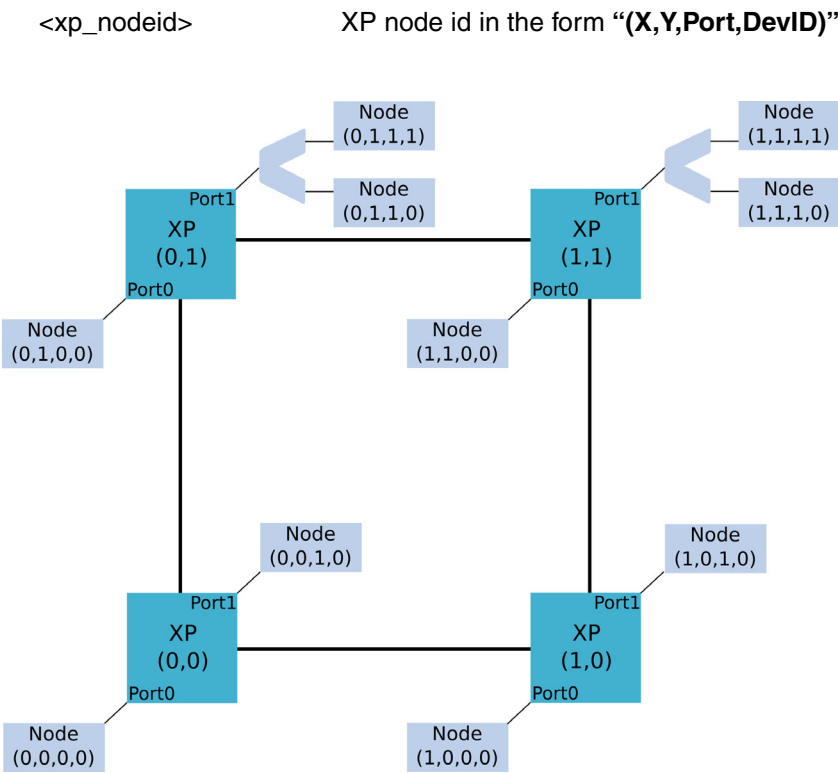

NOTE:

This command resets the configurations done by [CMN.EnhancedFilter](#)

Example:

```
;Trace all CMN REQ flits sent to Subdevice at port 1 of XP (2,3)  
  
CMN1.NodeID "(2,3,1,0)"
```

Format: **CMN<instance>.OFF**

Performs a global disable of traces from the selected CMN component.

Format: **CMN<instance>.ON**

Performs a global enable of traces from the selected CMN component.

Format: **CMN<instance>.Opcode <value>**

Default: None

Sets a global filter for the specified opcode uploaded at each XP.

**NOTE:**

Depending on the selected CMN **channel**, the same opcode value can describe different trace packets.

This command resets the configurations done by **CMN.EnhancedFilter**

Format:	<b>CMN</b> <instance>. <b>PortRoute</b> <port_route>
<port_route>	<b>AUTO</b>   <b>Analyzer</b>   <b>CAnalyzer</b>   <b>Onchip</b>   <b>Onchip2</b>   <b>Onchip3</b>   <b>Onchip4</b>   <b>Onchip5</b>

Default: AUTO

Prepares the selected trace hardware for CMN trace capture.

<b>AUTO</b>	Automatic detection
<b>Analyzer</b>	PowerTrace (via TPIU)
<b>CAnalyzer</b>	Compact-Analyzer: CombiProbe or $\mu$ Trace (MicroTrace)
<b>Onchip</b> <b>Onchip2</b> <b>Onchip3</b> <b>Onchip4</b> <b>Onchip5</b>	Onchip trace buffer (ETB, ETF or ETR)

Format:	<b>CMN</b> <instance>. <b>Register</b> [ <i>&lt;file&gt;</i> ] [ <i>/&lt;option&gt;</i> ]
<option>:	<b>SpotLight</b>   <b>DualPort</b>   <b>Track</b>   <b>CORE</b> <core_number>

Displays the CMN registers.

<option>	For a description of the options, see <a href="#">PER.view</a> .
----------	--

Format:

CMN<instance>.RESet

Resets all CMN settings to default.


CMN.state

Display CMN settings

Format:

CMN<instance>.state

Opens the **state** window, where you can configure the trace source of the selected CMN instance.

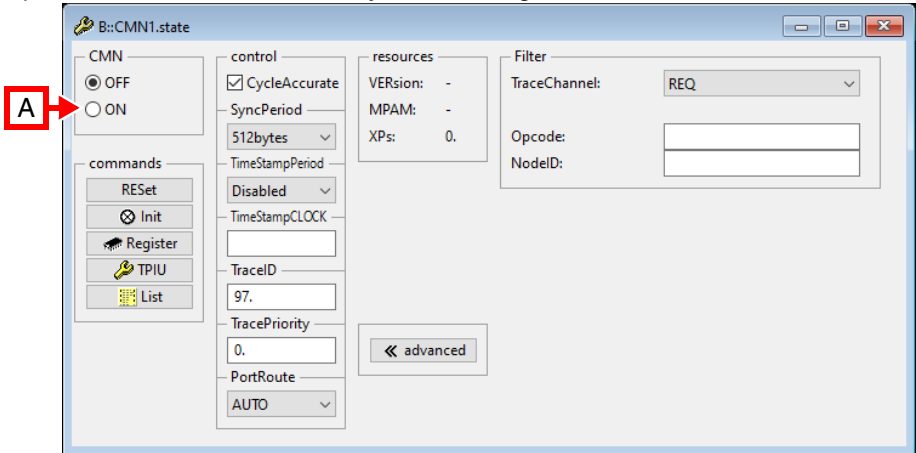

**A** For descriptions of the commands in the **CMN.state** window, please refer to the **CMN.\*** commands in this chapter.

**Example:** For information about **ON**, see [CMN.ON](#).

**Exceptions:**

- The **TPIU** button opens the **TPIU** window, see [TPIU.state](#).
- The **List** button opens the **SystemTrace.List** window, see [<trace>.List](#).

<instance>

For a description of <instance>, refer to the introduction to the command group [CMN](#).

Format:	<b>CMN&lt;instance&gt;.SyncPeriod</b> <i>&lt;period&gt;</i>
<i>&lt;period&gt;</i>	<b>256bytes   512bytes   1Mbytes</b>

Default: 512bytes

Configures the amount of trace packet data sent between two synchronization packets.

CMN.TimeStampCLOCK

Configure debugger for CMN timestamp clock

[build 152301 - DVD 09/2022]

Format:	<b>CMN&lt;instance&gt;.TimeStampCLOCK</b> <i>&lt;frequency&gt;</i>
---------	--

Default: 0

Configures the debugger to use the given frequency for the CMN timestamp calculation. The frequency is required to calculate timing information based on timestamp values.

CMN.TimeStampPeriod

Set period of timestamp packet

Format:	<b>CMN&lt;instance&gt;.TimeStampPeriod</b> <i>&lt;period&gt;</i>
<i>&lt;period&gt;</i> :	<b>Disabled   8kCycles   16kCycles   32kCycles   64kCycles</b>

Default: Disabled

Configures the timestamp packet insertion period in clock cycles. Global timestamp values can be used to correlate CMN trace with trace data from other sources. However, they are not as precise as cycle counter values.

<b>NOTE:</b>	Currently, TRACE32 does not allow the simultaneous use of timestamps and cycle counter values in CMN trace. So either the generation of timestamps or cycle counter information is turned off.
--------------	--

Format:	<b>CMN</b> <instance>. <b>TraceChannel</b> <channel>
<channel>	<b>REQ</b>   <b>RSP</b>   <b>SNP</b>   <b>DAT</b>

Default: REQ

Sets a global filter for the specified CMN channel at each XP. As the communication on the CMN is channel based, the selection of this command determines which trace messages are part of the trace. The CMN implements a **REQ**uest channel, a **ReSP**onse channel, a **SNooP** channel, and a **DAT**a channel.

<b>NOTE:</b>	This command resets the configurations done by <a href="#">CMN.EnhancedFilter</a>
--------------	---

CMN.TraceID

Sets trace ID

Format:	<b>CMN</b> <instance>. <b>TraceID</b> <id>   <id_start>--<id_end>
---------	---

Default: 0x61

Sets the trace ID of the CMN. To decode traces from multiple CMN instances, define an ID range.

<id\_start>                      Must be an even number.

CMN.TracePriority

Set priority for CMN manually

Format:	<b>CMN</b> <instance>. <b>TracePriority</b> <priority>
---------	--

TRACE32 automatically assigns an appropriate priority to the CMN. This command allows the user to change the priority for the CMN trace information.

Format:	CMN.VERsion <version>
<option>:	AUTO   CMN-600   CMN-650   CMN-700

Default: AUTO.

Allows to specify manually the CMN type.

## CMN Example

---

This example for a typical onchip setup with a NeoverseN1.

```
SYStem.CONFIG.CMN1.Base AXI:0x50d00000      ; Informs TRACE32 about
SYStem.CONFIG.CMN1.RootNodeBase AXI:0x50d30000 ; the CMN component at
SYStem.CONFIG.CMN1.XYBits 2bit              ; CoreSight ETF1
SYStem.CONFIG.ETF1.Base DAP:0x80900000
SYStem.CONFIG.ETF1.ATBSource CMN

CMN1.Reset

CMN1.TraceID 3.

CMN1.TraceChannel RSP                      ; Configure CMN to
                                           trace

CMN1.Opcode 0x3                          ; only RetryAck packets

CMN1Trace.METHOD Onchip

CMN1Trace.ARM

...

CMN1Trace.OFF

CMN1Trace.List CYcle AAddress SRCNODE TGTNODE ; Display trace packets
                                           ; with CMN operation,
                                           ; phys. address,
                                           ; source node,
                                           ; and target node
```



Format:	<b>CMN</b> <instance> <b>Trace.</b> <sub_cmd> [<cmn_channel>...] [<channel>...]
<cmn_channel>:	<b>CMNDETAILS   CYcle   SRCNAME   SRCNODE   TAG   TGTNAME   TGT-NODE   TXNID   WP</b>

Using the **CMNTrace** command group, you can analyze and display the recorded CMN trace data. The command group consists of the name of the trace source, here **CMN**<instance>, plus the keyword **Trace** of the <trace> command group.

<instance>	For a description of <instance>, refer to the introduction to the command group <b>CMN</b> .
<sub_cmd>  <b>PMILV</b>	For descriptions of the subcommands, please refer to the general <trace> command descriptions in “ <b>General Commands Reference Guide T</b> ” (general_ref_t.pdf).  <b>Example:</b> For a description of <b>CMNTrace.List</b> , refer to <b>&lt;trace&gt;.List</b>

<cmn_channel>	The following, additional channels are relevant for the analysis of CMN trace data:
<b>CMNDETAILS</b>	Shows flags, attributes and error codes from the trace packet. For a description of the shown values, please refer to the <b>next chapter</b> .
<b>CYcle</b>	Name of the trace packet type according to the opcode and channel. To see which types are possible, please refer to the <i>AMBA® 5 CHI Architecture Specification Appendix A</i>
<b>SRCNAME</b>	CMN subcomponent’s name of the trace packet source which was set with <b>SYStem.CONFIG.CMNx.DEVICEName</b>
<b>SRCNODE</b>	CMN subcomponent identifier of the trace packet source in the following format: (X,Y,Port,DevID)
<b>TAG</b>	Shows the trace packet’s TRACETAG flag
<b>TGTNAME</b>	CMN subcomponent’s name of the trace packet destination which was set with <b>SYStem.CONFIG.CMNx.DEVICEName</b>
<b>TGTNODE</b>	CMN subcomponent identifier of the trace packet destination in the following format: (X,Y,Port,DevID)

<b>TXNID</b>	Trace packet's Transaction ID
<b>WP</b>	The DTM's watchpoint that generated the trace packet
<b>&lt;channel&gt;</b>	For a description of the default channels, see <a href="#">&lt;trace&gt;.List ... &lt;items&gt;</a> .


Example:

```
; Display cycle activity between SRCNODE and TGTNODE
CMN1Trace.List CYcle SRCNODE TGTNODE
```

**NOTE:** Please be aware, that the CMN trace does not contain information about the “real” memory content. The trace provides meta information on the coherency protocol, only.

Description of the CMNDETAILS values

The CMNDETAILS trace channel displays flags, attributes and error codes contained in the CMN trace packets. Please be aware that not all information is contained in each CMN trace packet. The following picture shows an example CMN trace listing with a highlighted CMNDETAIL column.

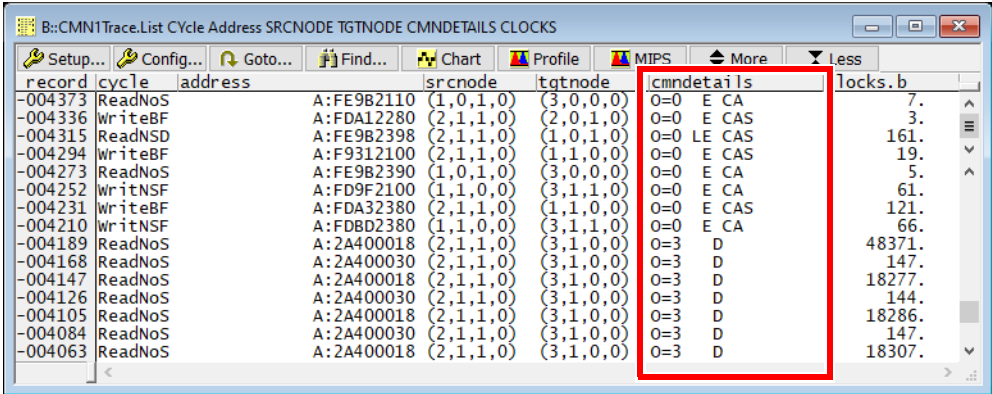

If the trace packet originated from the REQ CMN channel, the CMNDETAILS display the CMN transaction attributes. This information is shown by following values:

- O=<value>** This label displays the <value> given in the Order field.
- L** If this letter is visible, the packet's LikelyShared flag is set.
- E** If this letter is visible, the EWA bit is set in the packet's MemAttr field.
- D** If this letter is visible, the Device bit is set in the packet's MemAttr field.


<b>C</b>	If this letter is visible, the Cacheable bit is set in the packet's MemAttr field.
<b>A</b>	If this letter is visible, the Allocate bit is set in the packet's MemAttr field.
<b>S</b>	If this letter is visible, the packet's SnpAttr flag is set.

If the trace packet originated from either the RSP or DAT CMN channel, the CMNDETAILS display the error status of the CMN response. This information is given as shown here:

<b>OK</b>	Either the normal access was successful or the exclusive access failed.
<b>EXOK</b>	Either the read or write portion of an exclusive access was successful.
<b>DERR</b>	A data error occurred.
<b>NDERR</b>	A non-data error occurred.

If the trace packet originated from the SNP CMN channel, the CMNDETAILS display following flags relevant to CMN snoop packets:

<b>DNGTSD</b>	If this is visible, the packet's DoNotGoToSD flag is set.
<b>RTSRC</b>	If this is visible, the packet's RetToSrc flag is set.




CPTracer

Configure CPTracer component on target

[\[Process Overview\]](#)

CPTracer stands for Common Platform Tracer (CPT). The CPTracer component allows you to collect statistics from different bus probes, such as latency, throughput and other transactional metrics.

For configuration, use the TRACE32 command line, a PRACTICE script (\*.cmm), or the **CPTracer.state** window.

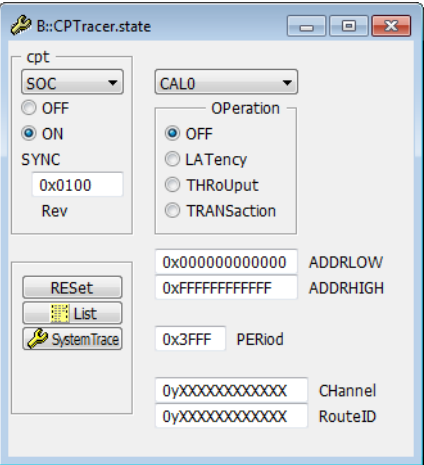

To display and analyze the recorded trace data, use the **CPTracerTrace** command group.

See also

- CPTracer.<aggregator>.<probe>.ADDRESSHIGH
  - CPTracer.<aggregator>.<probe>.CHannel
  - CPTracer.<aggregator>.<probe>.OPCODE
  - CPTracer.<aggregator>.<probe>.PERiod
  - CPTracer.<aggregator>.OFF
  - CPTracer.<aggregator>.SYNC
  - CPTracer.state
  - CPTracerTrace
- CPTracer.<aggregator>.<probe>.ADDReSSLOW
  - CPTracer.<aggregator>.<probe>.DIRection
  - CPTracer.<aggregator>.<probe>.OPERation
  - CPTracer.<aggregator>.<probe>.RouteID
  - CPTracer.<aggregator>.ON
  - CPTracer.RESet
  - CPTracer.TraceID

Format:

CPTracer.RESet

All CPT settings are reset to their defaults.

See also

- CPTracer
- CPTracer.state


CPTracer.state

Display CPT settings

Format:

CPTracer.state

Shows the CPT setup window.

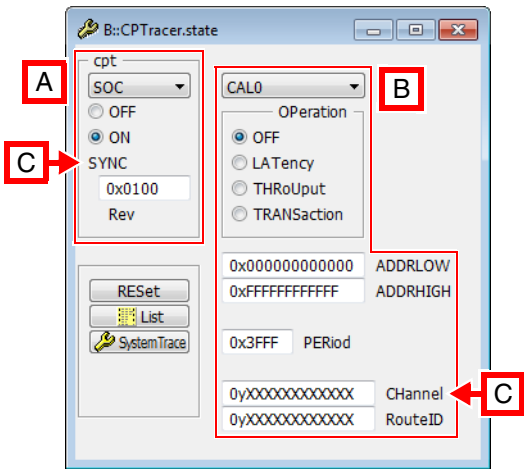

- A** `<aggregator>`. Here, it is set to **SOC**. The fields below refer to the selected `<aggregator>`.
- B** `<probe>`. Here, it is set to **CAL0**. The fields below refer to the selected `<probe>`.
- C** For descriptions of the commands in the **CPTracer.state** window, please refer to the **CPTracer.\*** commands in this chapter.
- Example 1:** For information about **SYNC**, see [CPTracer.<aggregator>.SYNC](#).
- Example 2:** For information about **CHannel**, see [CPTracer.<aggregator>.<probe>.CHannel](#).

See also

- CPTracer
- CPTracer.<aggregator>.<probe>.ADDRessLOW
- CPTracer.<aggregator>.<probe>.DIRection
- CPTracer.<aggregator>.<probe>.OPeration
- CPTracer.<aggregator>.<probe>.RouteID
- CPTracer.<aggregator>.<probe>.ADDRessHIGH
- CPTracer.<aggregator>.<probe>.CHannel
- CPTracer.<aggregator>.<probe>.OPCODE
- CPTracer.<aggregator>.<probe>.PERiod
- CPTracer.<aggregator>.OFF

- CPTracer.<aggregator>.ON
- CPTracer.RESet

- CPTracer.<aggregator>.SYNC
- CPTracer.TraceID

Format: CPTracer.TraceID <id>

Default: 0x50

Sets the CoreSight ATB ID of the first aggregator.

<id> Will increase automatically with each subsequent aggregator.

See also

CPTracer

CPTracer.state

CPTracer.<aggregator>.ON

Switch aggregator on

Format: CPTracer.<aggregator>.ON

Performs a global enable of traces from all probes of the aggregator.

See also

CPTracer

CPTracer.state

CPTracer.<aggregator>.OFF

Switch aggregator off

Format: CPTracer.<aggregator>.OFF

Performs a global disable of traces from all probes of the aggregator.

See also

CPTracer

CPTracer.state

Format: CPTracer.SYNC <bytes>

Default: 0x100

Sets the number of regular trace <bytes> between two synchronization packets.

**What are synchronization packets?** Synchronization packets are periodic starting points in the trace stream, which allow the recorded flow trace data to be decoded. The result can then be visualized in the **CPTracerTrace.\*** windows of TRACE32, e.g. the **CPTracerTrace.List** window or the **CPTracerTrace.DRAW.\*** windows. A visualization of the trace data is usually not possible without synchronization packets in the trace stream.

In this example, the number of regular trace <bytes> is 0x100.

B0 ... B255, SP B0 ... B255, SP B0 ... B255, SP ...  
0x100            0x100            0x100

B = regular trace <bytes>  
SP = synchronization packet

See also

[■ CPTracer](#)[■ CPTracer.state](#)

CPTracer.<aggregator>.<probe>.ADDRessLOW

Lower filter address

Format: CPTracer.<aggregator>.<probe>.ADDRessLOW <value>

Default: 0

Only transactions with address >= <value> will generate trace packets. This command must be used together with **CPTracer.<aggregator>.ADDRessHIGH**.

See also

[■ CPTracer](#)[■ CPTracer.state](#)



Format:

CPTracer.<aggregator>.<probe>.ADDRessLOW <value>

Default: 0xFFFFFFFFFFFFFFF

Only transactions with address  $\leq$  <value> will generate trace packets. This command must be used together with [CPTracer.<aggregator>.ADDRessLOW](#).

See also

- [CPTracer](#)
- [CPTracer.state](#)

CPTracer.<aggregator>.<probe>.CHannel

Filter by channel ID

Format:

CPTracer.<aggregator>.<probe>.CHannel <bitmask>

Default: 0yXXXXXXXXXXXXX

Only transactions with a channel ID within <bitmask> will generate trace packets.

See also

- [CPTracer](#)
- [CPTracer.state](#)

CPTracer.<aggregator>.<probe>.DIRection

Filter by transfer direction

[build 140174 - DVD 02/2022]

Format:

CPTracer.<aggregator>.<probe>.DIRection <direction>

<direction>:

Read  
Write  
ReadWrite

Default: ReadWrite

Only transactions with selected *<direction>* will generate trace packets.

See also

- [CPTracer](#)
- [CPTracer.state](#)

CPTracer.<aggregator>.<probe>.OPCODE

Filter by opcode

[build 175157 - DVD 02/2025]

Format:

CPTracer.<aggregator>.<probe>.OPCODE *<bitmask>*

Default: 0yXXXXXXXXXXXX

Filters transactions to generate trace packets only when their opcode matches the specified *<bitmask>*.

See also

- [CPTracer](#)
- [CPTracer.state](#)

CPTracer.<aggregator>.<probe>.OPeration

Mode of operation

Format:

CPTracer.<aggregator>.<probe>.OPeration *<mode>*

<mode>:

OFF  
LATency  
THRoUp  
TRANSACTION

Default: OFF.

Defines which type of trace packet is to be generated.

<b>OFF</b>	No trace packets.
<b>LATency</b>	Trace packets carrying latency information.
<b>THRoUpUt</b>	Trace packets carrying throughput information.
<b>TRANSaction</b>	Trace packets carrying transaction information.

See also

- [CPTracer](#)
- [CPTracer.state](#)

CPTracer.<aggregator>.<probe>.PERiod

Set period of sample window

Format:

CPTracer.<aggregator>.<probe>.PERiod <value>

Default: 0x3FFF

Sets the period of the sample window which triggers trace packet generation.

See also

- [CPTracer](#)
- [CPTracer.state](#)

CPTracer.<aggregator>.<probe>.RouteID

Filter by route ID

Format:

CPTracer.<aggregator>.<probe>.RouteID <bitmask>

Default: 0yXXXXXXXXXXXX

Only transactions with a route ID within <bitmask> will generate trace packets.

See also

- [CPTracer](#)
- [CPTracer.state](#)

## CPTracer Example

---

This example refers to AM65xx devices. Please note that aggregator and probe names are device specific and may be different on other SOCs.

```
; The CPTracer aggregators are mapped to STM2 on AM65xx devices.
SystemTrace.Method Analyzer          ; Select trace port
STM2.TimeStamps ON                   ; We want to inspect STP timestamps
STM2.TraceID 0x50--0x53              ; Do not confuse with
                                      ; CPTracer.TraceID!
                                      ; We have to assign the same
                                      ; TraceID(s)twice.
                                      ; You can also use this command to
                                      ; filter an already captured trace.

SystemTrace.Init

; Now configure the CPTracer component:
CPTracer.RESet
CPTracer.SOC.CAL0.Operation.LATency
CPTracer.SOC.MCU.EXPORT_SLV.Operation.LATency

; trace data is recorded using the commands Go, WAIT, Break

; Display the recorded trace data
CPTracerTrace.List PRObe CYcle Address
```

Format:	<b>CPTTracerTrace.</b> <i>&lt;sub_cmd&gt;</i> [ <i>&lt;cpt_channel&gt;...</i> ] [ <i>&lt;channel&gt;...</i> ]
<i>&lt;cpt_channel&gt;</i> :	<b>P</b> Robe   <b>C</b> Ycle   <b>A</b> ddress   <b>L</b> AT. <i>&lt;xxx&gt;</i>   <b>T</b> RANS. <i>&lt;xxx&gt;</i>   <b>T</b> HRU. <i>&lt;xxx&gt;</i>   <b>T</b> ime. <i>&lt;xxx&gt;</i>

Using the **CPTTracerTrace** command group, you can analyze and display the recorded CPT trace data. The command group consists of the name of the trace source, here **CPTTracer**, plus the keyword **Trace** of the *<trace>* command group.

<i>&lt;sub_cmd&gt;</i>	<p>For descriptions of the subcommands, please refer to the general <i>&lt;trace&gt;</i> command descriptions in “<a href="#">General Commands Reference Guide T</a>” (<i>general_ref_t.pdf</i>).</p> <p><b>Example:</b> For a description of <b>CPTTracerTrace.List</b>, refer to <a href="#">&lt;trace&gt;.List</a></p>
------------------------	---

<i>&lt;cpt_channel&gt;</i>	The following channels are relevant for the analysis of CPT trace data:
<i>&lt;xxx&gt;</i>	A list of all valid replacements for the placeholder <i>&lt;xxx&gt;</i> will be displayed as softkeys in TRACE32 as soon as the dot ‘.’ is entered in the <a href="#">TRACE32 command line</a> .
<b>P</b> Robe	Name of the probe. See <a href="#">example</a> .
<b>C</b> Ycle	Type of trace packet.
<b>A</b> ddress	Traced address of transaction packet. Also see note below.
<b>L</b> AT. <i>&lt;xxx&gt;</i>	Latency packet specific information <i>&lt;xxx&gt;</i> . See <a href="#">example</a> .
<b>T</b> RANS. <i>&lt;xxx&gt;</i>	Transaction packet specific information <i>&lt;xxx&gt;</i> .
<b>T</b> HRU. <i>&lt;xxx&gt;</i>	Throughput packet specific information <i>&lt;xxx&gt;</i> .
<b>T</b> ime. <i>&lt;xxx&gt;</i>	Timing information.

<i>&lt;channel&gt;</i>	For a description of the default channels, see <a href="#">&lt;trace&gt;.List ... &lt;items&gt;</a> .
------------------------	---

### Example:


```
; Display maximum latency:
;                               <cpt_channel>  <cpt_channel>
CPTracerTrace.List             PProbe          LAT.maxwait
```

### See also

---

■ [CPTracer](#)

# OCP Component



SYStem.CONFIG.OCP

Inform TRACE32 about OCP component

[\[Process Overview\]](#)

Format:	<b>SYStem.CONFIG.OCP.&lt;sub_cmd&gt;</b>
<sub_cmd>:	<generic>   <component_specific>
<component_specific>:	<b>TraceID Type 4</b>

If the OCP component is not enabled for your specific device, use the following commands for configuration. Both, the base address and the ID must be set in order to enable the OCP.

<generic>	For descriptions of the generic subcommands, click <a href="#">here</a> .
<b>Type 4</b>	Currently only supported for OMAP4.
<b>TraceID</b>	Sets the STM master ID of the OCP component.

Deprecated vs. New Commands:


SYStem.CONFIG.TIOCPBASE (deprecated)	<b>SYStem.CONFIG.OCP.Base</b>
SYStem.CONFIG.TIOCPID (deprecated)	<b>SYStem.CONFIG.OCP.TraceID</b>

See also

- [OCP](#)
- ▲ 'Generic Subcommands, Parameters, and Options' in 'System Trace User's Guide'

OCP stands for OpenCoreProtocol WatchPoint (OCP-WP). The OCP-WP monitors OCP requests directed to a selected target attached to the L3 interconnect of the OMAP4. Tracing the bus traffic is non-intrusive and enables the developer to capture all requests addressed to a target or only a subset of it defined by up to four different filters (see [OCP.TraceFilter<x>](#) commands).

For configuration, use the TRACE32 command line, a PRACTICE script (\*.cmm), or the [OCP.state](#) window.

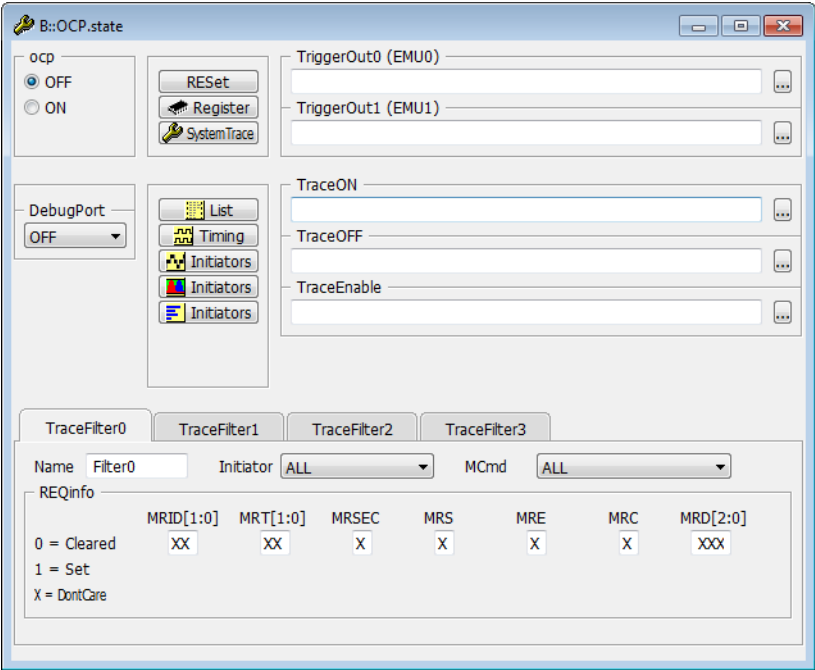

To display and analyze the recorded trace data, use the [OCPTrace](#) command group.

See also

- |                                   |                                     |                               |   |
|-----------------------------------|-------------------------------------|-------------------------------|---|
| ■ <a href="#">OCP.AutoIDLE</a>    | ■ <a href="#">OCP.DebugPort</a>     | ■ <a href="#">OCP.OFF</a>     | ■ <a href="#">OCP.ON</a>                  |
| ■ <a href="#">OCP.Register</a>    | ■ <a href="#">OCP.RESet</a>         | ■ <a href="#">OCP.state</a>   | ■ <a href="#">OCP.TraceEnable</a>         |
| ■ <a href="#">OCP.TraceFilter</a> | ■ <a href="#">OCP.TraceOFF</a>      | ■ <a href="#">OCP.TraceON</a> | ■ <a href="#">OCP.TriggerOut&lt;x&gt;</a> |
| ■ <a href="#">OCPTrace</a>        | ■ <a href="#">SYSTEM.CONFIG.OCP</a> |                               |   |



Format: OCP.AutoIDLE [ON | OFF]

Default: OFF.

If **ON**, the OCP-WP is gated whenever no activity can be observed on the OCP interface. If **OFF**, the OCP-WP is clocked permanently.

See also

- OCP
- OCP.state

OCP.DebugPort

Select target to be traced

Format: OCP.DebugPort [<debug\_port> | <number>]

Default: OFF.

- <debug\_port>

Trace transactions to the predefined L3 target <debug\_port>.
- <number>

Trace transactions to the user-defined L3 target with ID <number>.

See also

- OCP
- OCP.state

OCP.OFF

Switch OCP off

Format: OCP.OFF

Switches the OCP component off.

See also

- OCP
- OCP.state

Format:

OCP.ON

Switches the OCP component on.

See also

[OCP](#)[OCP.state](#)

OCP.Register

Display OCP registers

Format:

OCP.Register [*<file>*] [*/<option>*]

<option>:

SpotLight | DualPort | Track | AlternatingBackGround  
CORE *<core\_number>*

Displays the OCP registers.

<option>

For a description of the options, see [PER.view](#).

See also

[OCP](#)[OCP.state](#)

OCP.RESet

Reset OCP settings to their defaults

Format:

OCP.RESet

All OCP settings are reset to their defaults.


See also

[OCP](#)[OCP.state](#)

Format:

OCP.state

Shows the OCP setup window.

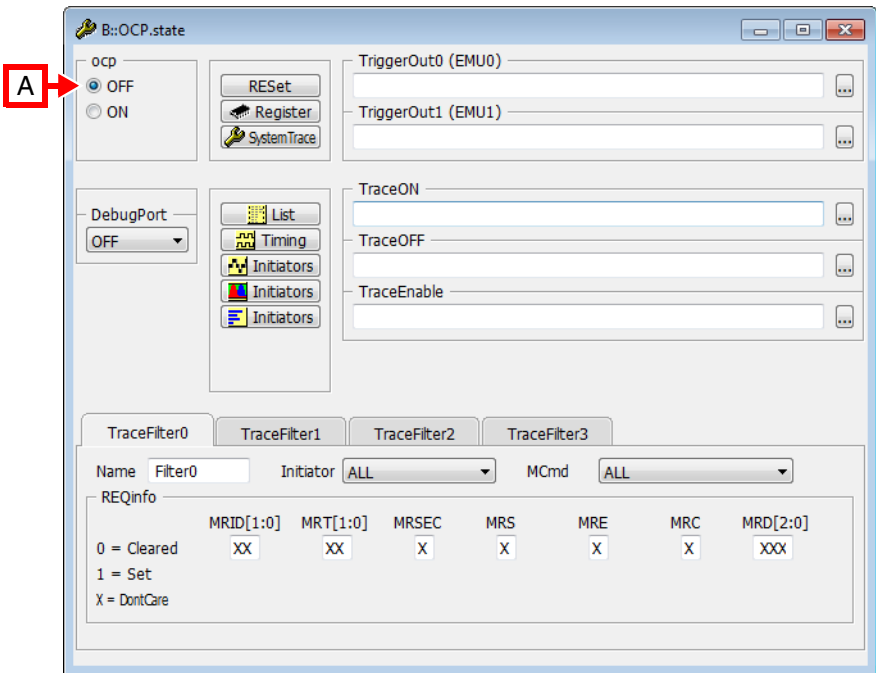

- A** For descriptions of the commands in the **OCP.state** window, please refer to the **OCP.\*** commands in this chapter.
- Example:** For information about **OFF**, see [OCP.OFF](#).

See also

- [OCP](#)  
[OCP.ON](#)  
[OCP.TraceFilter](#)
- [OCP.AutoIDLE](#)  
[OCP.Register](#)  
[OCP.TraceOFF](#)
- [OCP.DebugPort](#)  
[OCP.RESet](#)  
[OCP.TraceON](#)
- [OCP.OFF](#)  
[OCP.TraceEnable](#)  
[OCP.TriggerOut<x>](#)

See also

- [OCP.TraceFilter<x>.Initiator](#)
- [OCP.TraceFilter<x>.MCmd](#)
- [OCP.TraceFilter<x>.NAME](#)
- [OCP.TraceFilter<x>.REQinfo](#)
- [OCP](#)
- [OCP.state](#)

OCP.TraceFilter<x>.NAME

Name a filter

Format:

OCP.TraceFilter<x>.NAME <name>

Filters can be named in order to identify the filter a traced transaction has passed. The name of the filter can be displayed in the trace list window via [TraceOCP.List FilterName](#).

Example:

```
OCP.TraceFilter0.NAME "Filter0"
```

See also

- [OCP.TraceFilter](#)

OCP.TraceFilter<x>.MCmd

Filters traffic by transaction type

Format:

OCP.TraceFilter<x>.MCmd <command>

Default: ALL.

Only transactions of type <command> will pass filter <x>.

See also

- [OCP.TraceFilter](#)

Format:

OCP.TraceFilter<x>.Initiator [ALL | <initiator>]

- ALL (default)Transactions from all initiators is traced.
- <initiator>Only transactions from <initiator> will pass filter <x>.

See also

■ OCP.TraceFilter

Format:

OCP.TraceFilter<x>.REQinfo <qualifier>.[<value> | <mask>]

Default: 0yXXX (Trace all)

- <value>Only trace transactions if the <qualifier> equals <value>.
- <mask>Alternative way to define the REQinfo filter criteria as bitmask; <mask> must be of format '0ybbb', whereas b = 

0,	Cleared
1,	Set
X].	Don't Care

Example:

OCP.TraceFilter0.REQinfo MReqDomain.0y11X

;Trace transactions which  
;have the two upper bits  
;set ignore the state of  
;the lowest bit.

See also

■ OCP.TraceFilter

Format: OCP.TraceEnable <range>

Default: 0x00000000-0xffffffff

OCP traffic is only captured if the address is within the specified <range>. The range must be specified as the offset from the base address of the selected debug port (**OCP.DebugPort**), not to the global address! **OCP.TraceEnable** and **OCP.TraceON** / **OCP.TraceOFF** cannot be applied at the same time!

Example:

```
;Debug port base address = 0xa0001000
;Range to be monitored   = 0xa0001000 to 0xa0001020

OCP.TraceEnable 0x00000000--0x00000020
```

See also

- [OCP](#)
- [OCP.state](#)

OCP.TraceOFF

Stop tracing

Format: OCP.TraceOFF [EMU1 | <address>]

Stops tracing if the trigger condition or address match occurs. Tracing will continue on an **OCP.TraceON** condition.

**OCP.TraceEnable** and **OCP.TraceOFF** cannot be applied at the same time!  
**OCP.TriggerOut<x>** and **OCP.TraceOFF EMU1** cannot be used at the same time!

Default: **OCP.TraceEnable**

- EMU1

Stops tracing upon a HIGH-TO-LOW transition of the EMU1 trigger input.
- <address>

Stops tracing upon an address match.

See also

- [OCP](#)
- [OCP.state](#)

Format:           **OCP.TraceON** [EMU0 | <address>]

Starts tracing if the trigger condition or address match occurs. Tracing continues even if the trigger condition or address match no longer holds.

**OCP.TraceEnable** and **OCP.TraceON** cannot be applied at the same time!  
**OCP.TriggerOut<x>** and **OCP.TraceON EMU0** cannot be used at the same time!

Default: **OCP.TraceEnable**

- EMU0                                Starts tracing upon a HIGH-TO-LOW transition of the EMU0 trigger input.
- <address>                        Starts tracing upon an address match.

See also

- [OCP](#)
- [OCP.state](#)

OCP.TriggerOut<x>

Generate trigger event

Format:           **OCP.TriggerOut** [<address | <range>]

- <address>                        Asserts trigger EMU<x> if the monitored address matches <address>.
- <range>                         Asserts trigger EMU<x> if the monitored address is within <range>.

**OCP.TriggerOut<x>** and **OCP.TraceON EMU0** / **OCP.TraceOFF EMU1** cannot be used at the same time!

See also

- [OCP](#)
- [OCP.state](#)

Format:

OCPTTrace.<sub\_cmd> [<ocp\_channel>] [<channel>...]

Using the **OCPTTrace** command group, you can analyze and display the recorded OCP trace data. The command group consists of the name of the trace source, here **OCP**, plus the keyword **Trace** of the <trace> command group.

<sub_cmd>	<p>For descriptions of the subcommands, please refer to the general &lt;trace&gt; command descriptions in “<b>General Commands Reference Guide T</b>” (general_ref_t.pdf).</p> <p><b>Example:</b> For a description of <b>OCPTTrace.List</b>, refer to <b>&lt;trace&gt;.List</b></p>
-----------	--

<ocp_channel>	The following channel is relevant for the analysis of OCP trace data:
<b>OCPFN</b>	FilterName: Name of the filter the OCP message has passed.

<channel>	For a description of the default channels, see <b>&lt;trace&gt;.List ... &lt;items&gt;</b> .
-----------	--

Example:


```
; Display trace data
OCPTTrace.List DEFault OCPFN List.NoDummy
```

See also

- OCP



# PMI Component



## SYStem.CONFIG.PMI

Inform TRACE32 about PMI component

[\[Process Overview\]](#)

Format:

**SYStem.CONFIG.PMI.<sub\_cmd>**

<sub\_cmd>:

<generic> | <component\_specific>

<component\_specific>:

**TraceID** <id>

If the PMI component is not enabled for your specific device, use the following commands for configuration. Both, the base address and the ID must be set in order to enable the PMI.

<generic>	For descriptions of the generic subcommands, click <a href="#">here</a> .
<b>TraceID</b>	Sets the STM master ID of the PMI component.

Deprecated vs. New Commands:


<b>SYStem.CONFIG.TIPMIBASE</b> (deprecated)	<b>SYStem.CONFIG.PMI.Base</b>
<b>SYStem.CONFIG.TIPMIID</b> (deprecated)	<b>SYStem.CONFIG.PMI.TraceID</b>

See also

- [PMI](#)
- ▲ 'Generic Subcommands, Parameters, and Options' in 'System Trace User's Guide'

The Power Management component monitors power domain state changes of other components on the OMAP4. For more detailed information refer to the OMAP4 ETRM available from [https://www-a.ti.com/extranet/programs/emulation/OMAP4\\_ETRM\\_2.0-Setup.exe](https://www-a.ti.com/extranet/programs/emulation/OMAP4_ETRM_2.0-Setup.exe).

For configuration, use the TRACE32 command line, a PRACTICE script (\*.cmm) or the **PMI.state** window.

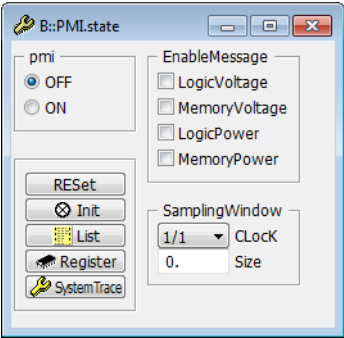

To display and analyze the recorded trace data, use the **PMITrace** command group.

See also

- |                                     |                                      |                             |                                |
|-------------------------------------|--------------------------------------|-----------------------------|--------------------------------|
| ■ <a href="#">PMI.EnableMessage</a> | ■ <a href="#">PMI.OFF</a>            | ■ <a href="#">PMI.ON</a>    | ■ <a href="#">PMI.Register</a> |
| ■ <a href="#">PMI.RESet</a>         | ■ <a href="#">PMI.SamplingWindow</a> | ■ <a href="#">PMI.state</a> | ■ <a href="#">PMITrace</a>     |
| ■ <a href="#">SYStem.CONFIG.PMI</a> |                                      |                             |                                |

Format:	PMI.EnableMessage.<event_msg> [ON   OFF]
<event_msg>:	LogicVoltage MemoryVoltage LogicPower MemoryPower

Default: OFF.

Event messages are emitted in case a memory or logic block changes its voltage or power state.

LogicVoltage	Voltage levels of logic blocks.
MemoryVoltage	Voltage levels of memory blocks.
LogicPower	Power FSM states of logic blocks.
MemoryPower	Power state of memory blocks.

See also

■ [PMI](#)

PMI.OFF

Switch PMI off

Format:	PMI.OFF
---------	---------

Switches the PMI component off.

See also

■ [PMI](#)

Format:	<b>PMI.ON</b>
---------	---------------

Switches the PMI component on.

See also

■ [PMI](#)

PMI.Register

Display the PMI registers

Format:	<b>PMI.Register</b> [ <i>/</i> <option>]
<option>:	<b>SpotLight   DualPort   Track   AlternatingBackGround CORE</b> <core_number>

Displays the PMI registers.

<option>                      For a description of the options, see [PER.view](#).

See also

■ [PMI](#)

PMI.RESet

Resets PMI settings to their defaults

Format:	<b>PMI.Reset</b>
---------	------------------

All PMI settings are reset to their defaults.

See also

■ [PMI](#)

See also

- [PMI.SamplingWindow.CLock](#)
- [PMI.SamplingWindow.Size](#)
- [PMI](#)

PMI.SamplingWindow.CLock

Set sampling window clock

Format:

PMI.SamplingWindow.CLock <ratio>

<ratio>

Divider ratio of the sampling window clock.  
It is derived from the PMI component's clock. Valid ratios range from 1/1 to 1/16.  
Default: 1/1

See also

- [PMI.SamplingWindow](#)

PMI.SamplingWindow.Size

Set sampling window size

Format:

PMI.SamplingWindow.Size <cycles>

<cycles>


Size of the sampling window.  
Smaller windows allow for more accurate event reports while bigger sampling windows reduce trace traffic. Valid sizes range from 1 to 256.  
Default: 1

See also

- [PMI.SamplingWindow](#)

Format: **PMI.state**

Shows the PMI setup window.

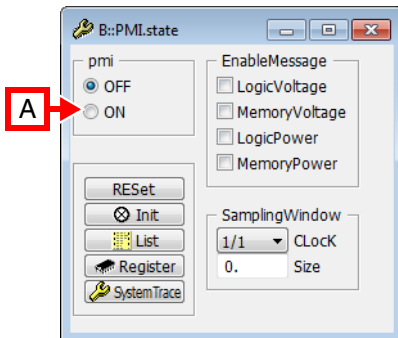

**A** For descriptions of the commands in the **PMI.state** window, please refer to the **PMI.\*** commands in this chapter.

**Example:** For information about **ON**, click [PMI.ON](#).

#### Exceptions:

- The **List** button opens the **PMITrace.List** window, see [<trace>.List](#). For more information, refer to the description of the [PMITrace](#) command group.
- The **SystemTrace** button opens the **SystemTrace.state** window, see [<trace>.state](#). For more information, refer to the description of the [SystemTrace](#) command group.

#### See also

■ [PMI](#)

```
PMI.RESet
```

```
PMI.SamplingWindow.Size 15
```

```
PMI.EnableMessage.LogicVoltage ON
```

```
PMI.ON
```

```
...
```

```
PMI.OFF
```

```
PMITrace.List CYcle PMILV.<domain>      ; Display logic voltage domain  
                                           ; <domain> voltage level.
```

Format:	<b>PMITrace.</b> <i>&lt;sub_cmd&gt;</i> [ <i>&lt;pmi_channel&gt;...</i> ] [ <i>&lt;channel&gt;...</i> ]
<i>&lt;pmi_channel&gt;</i> :	<b>PMILV.</b> <i>&lt;domain&gt;</i>   <b>PMILVOFF</b>   <b>PMIMV.</b> <i>&lt;domain&gt;</i>   <b>PMILP.</b> <i>&lt;domain&gt;</i>   <b>PMIMP.</b> <i>&lt;domain&gt;</i>   <b>PMISTAT</b>   <b>PMILAT</b>   <b>CYcle</b>

Using the **PMITrace** command group, you can analyze and display the recorded CMI trace data. The command group consists of the name of the trace source, here **PMI**, plus the keyword **Trace** of the *<trace>* command group.

<i>&lt;sub_cmd&gt;</i>	<p>For descriptions of the subcommands, please refer to the general <i>&lt;trace&gt;</i> command descriptions in “<a href="#">General Commands Reference Guide T</a>” (<i>general_ref_t.pdf</i>).</p> <p><b>Example:</b> For a description of <b>PMITrace.List</b>, refer to <a href="#">&lt;trace&gt;.List</a></p>
------------------------	---

<i>&lt;pmi_channel&gt;</i>	The following channels are relevant for the analysis of PMI trace data:
<i>&lt;domain&gt;</i>	A list of all valid replacements for the placeholder <i>&lt;domain&gt;</i> will be displayed as softkeys in TRACE32 as soon as the dot ‘.’ is entered in the <a href="#">TRACE32 command line</a> .
<b>PMILV.</b> <i>&lt;domain&gt;</i>	Voltage level of logic voltage domain <i>&lt;domain&gt;</i> .
<b>PMILVOFF</b>	OFF mode voltage domain.
<b>PMIMV.</b> <i>&lt;domain&gt;</i>	FSM state of memory voltage domain <i>&lt;domain&gt;</i> .
<b>PMILP.</b> <i>&lt;domain&gt;</i>	Power state of logic power domain <i>&lt;domain&gt;</i> .
<b>PMIMP.</b> <i>&lt;domain&gt;</i>	Power state of memory power domain <i>&lt;domain&gt;</i> .
<b>PMISTAT</b>	Error flag indicating event message loss(es) caused by an undersized sampling window.
<b>PMILAT</b>	Event messages: Export latency in multiples of the sampling window.
<b>CYcle</b>	Domain name.

<i>&lt;channel&gt;</i>	For a description of the default channels, see <a href="#">&lt;trace&gt;.List ... &lt;items&gt;</a> .
------------------------	---



**Example:**


```
; Display trace data  
PMITrace.List Cycle PMILP.IVAHD PMIMP.IVAHD-TCM1
```

**See also**

---

■ [PMI](#)

# StatCol Component (Statistics Collector)



## SYStem.CONFIG.SC

Inform TRACE32 about StatCol component

[\[Process Overview\]](#)

Format:

**SYStem.CONFIG.SC.<sub\_cmd>**

<sub\_cmd>:

<generic> | <component\_specific>

<component\_specific>:

**TraceID <id>**

If the statistics collector is not enabled for your specific device, use the following commands allow for configuration. Both, the base address and the ID must be set in order to enable the statistics collector.

<generic>	For descriptions of the generic subcommands, click <a href="#">here</a> .
<b>TraceID</b>	Set the STM master ID of the statistics collector.

Deprecated vs. New Commands:

<b>SYStem.CONFIG.TISCID</b> (deprecated)	<b>SYStem.CONFIG.SC.TraceID</b>
--	---------------------------------


See also

- [StatCol](#)
- ▲ 'Generic Subcommands, Parameters, and Options' in 'System Trace User's Guide'

The NoC statistics collector provides information about the workload of an onchip bus system like throughput, latency, etc. For each bus system there is a separate implementation of the statistics collector (called 'probe'), hence all the commands listed in the following will affect the selected probe only, except for the **StatCol.RESet** command.

Configuring the statistics collector requires an in-depth knowledge of its structure and modes of operations. For those who do not have that knowledge or don't need to make use of the full extent of the statistics collector's features there are macro functions available. These set up most of the required configurations and are explained in chapter StatCol macro functions.

For configuration, use the TRACE32 command line, a PRACTICE script (\*.cmm) or the **StatCol.state** window.

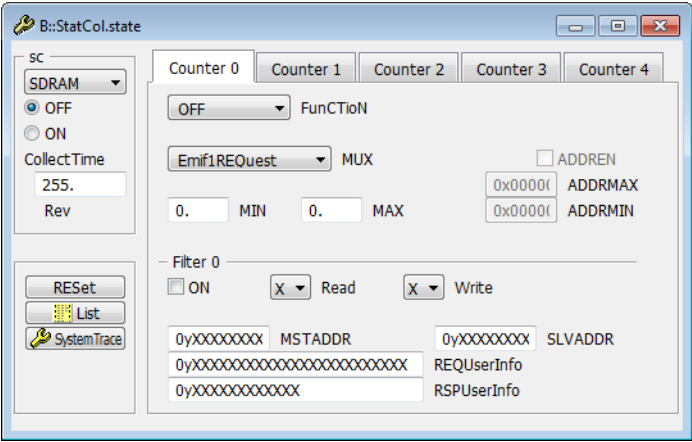

To display and analyze the recorded trace data, use the **StatColTrace** command group.

See also

- [StatCol.<probe>.CollectTime](#)
  - [StatCol.<probe>.OFF](#)
  - [StatCol.<probe>.REQuestEVENt](#)
  - [StatCol.RESet](#)
  - [StatColTrace](#)
- [StatCol.<probe>.Counter](#)
  - [StatCol.<probe>.ON](#)
  - [StatCol.<probe>.ReSPonseEVENt](#)
  - [StatCol.state](#)
  - [SYStem.CONFIG.SC](#)

Format: StatCol.RESet

All statistics collector settings are reset to their defaults.

See also


- StatCol
- StatCol.state

StatCol.state

Display statistics collector settings

Format: StatCol.state

Shows the statistics collector setup window.

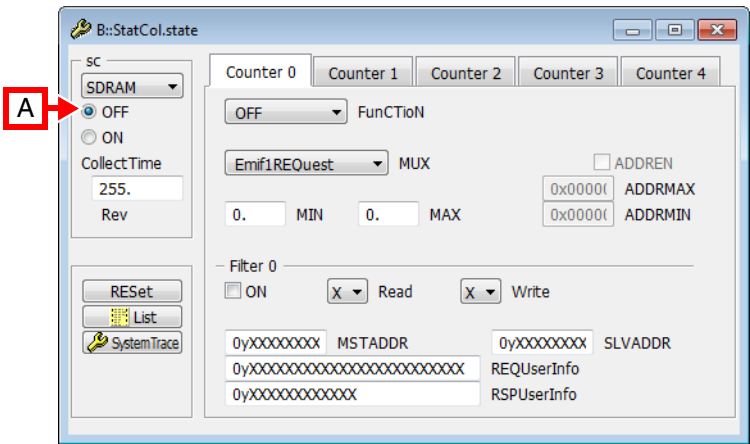

- A** For descriptions of the commands in the **StatCol.state** window, please refer to the **StatCol.\*** commands in this chapter.
- Example:** For information about **ON**, click [StatCol.ON](#).
- Exceptions:**
- The **List** button opens the **StatColTrace.List** window, see [<trace>.List](#). For more information, refer to the description of the [StatColTrace](#) command group.
  - The **SystemTrace** button opens the **SystemTrace.state** window, see [<trace>.state](#). For more information, refer to the description of the [SystemTrace](#) command group.

See also

- StatCol
- StatCol.<probe>.Counter
- StatCol.<probe>.ON
- StatCol.<probe>.ReSPonseEvent
- StatCol.<probe>.CollectTime
- StatCol.<probe>.OFF
- StatCol.<probe>.REquestEvent
- StatCol.RESet

Format: StatCol.<probe>.OFF

Switches the probe off.

See also

- StatCol
- StatCol.state

Format: StatCol.<probe>.ON

Switches the probe on.

See also

- StatCol
- StatCol.state

Format:	StatCol.<probe>.REQuestEvent.<event>
<event>:	NONE ANY TRANSFER WAIT BUSY PAKET DATA IDLES LATENCY

Default: NONE.

Selects the event detector for the probe's request link.

NONE	Do not detect any events.
ANY	Detect all events.
TRANSFER	Detect NTTP cell or OCP data/command transfers.
WAIT	Detect WAIT cycles (NTTP only).
BUSY	Detect BUSY cycles.
PAKET	Detect packet headers or OCP commands.
DATA	Detect payload transfers.
IDLES	Detect idle cycles.
LATENCY	Apply latency measurement.

See also

- StatCol
- StatCol.state

Format:StatCol.<probe>.REQuestEVenT.<event>

Default: NONE.

Selects the event detector for the probe's response link. See [StatCol.<probe>.REQuestEVenT](#).

See also

- [StatCol](#)
- [StatCol.state](#)

Format:StatCol.<probe>.CollectTime <cycles>

Default: 255.

Sets up the time interval in cycles after which the internal counters are reset and the result is sent to the STM.

See also

- [StatCol](#)
- [StatCol.state](#)

See also

- StatCol.<probe>.Counter <counter> ADDREN
- StatCol.<probe>.Counter <counter> ADDRMIN
- StatCol.<probe>.Counter <counter> Filter
- StatCol.<probe>.Counter <counter> MAX
- StatCol.<probe>.Counter <counter> SElect
- StatCol.state
- StatCol.<probe>.Counter <counter> ADDRMAX
- StatCol.<probe>.Counter <counter> EventInfo
- StatCol.<probe>.Counter <counter> FunCTioN
- StatCol.<probe>.Counter <counter> MIN
- StatCol

StatCol.<probe>.Counter <counter> ADDRMAX

Filter max address

Format: StatCol.<probe>.Counter <counter> ADDRessMAX.<value>

Default: 0.

Sets the upper bound for address filtering. See StatCol<probe>.Counter <counter> ADDRessENable. This command is available for certain CPUs only.

See also

- StatCol.<probe>.Counter

StatCol.<probe>.Counter <counter> ADDRMIN

Filter min address

Format: StatCol.<probe>.Counter <counter> ADDRessMIN.<value>

Default: 0.

Sets the lower bound for address filtering. See StatCol<probe>.Counter <counter> ADDRessENable. This command is available for certain CPUs only.

See also

- StatCol.<probe>.Counter



Format:

StatCol.<probe>.Counter <counter> ADDResSEnable [ON | OFF]

Default: OFF.

Only generates statistic data if address on bus is smaller than **ADDResMAX** and greater than **ADDResMIN**. This command is available for certain CPUs only.

See also

- [StatCol.<probe>.Counter](#)

StatCol.<probe>.Counter <counter> EventInfo

Select ‘EventInfo’ to count

Format:

StatCol.<probe>.Counter <counter> EventInfo.<eventinfo>

<eventinfo>:

LENgth  
PRESSure  
LATency

Default: LENgth.

Detects additional event information:

LENgth	Payload length.
PRESSure	Link pressure.
LATency	Transfer latency.

See also

- [StatCol.<probe>.Counter](#)

Format:

StatCol.<probe>.Counter <counter> MAX.<value>

Default: 0.

Increments <counter> if StatCol.<probe>.Counter <counter> SElect.MINMAX is selected and the defined EventInfo is within Max.<value> and Min.<value>.

See also

- StatCol.<probe>.Counter

Format:

StatCol.<probe>.Counter <counter> MIN.<value>

Default: 0.

Increments <counter> if StatCol.<probe>.Counter <counter> SElect.MINMAX is selected and the defined EventInfo is within Min.<value> and Max.<value>.

See also

- StatCol.<probe>.Counter

Format:	StatCol.<probe>.Counter <counter> SElect.<input>
<input>:	HIT MINMAX ADD AND OR REQ RSP ALL EXT

Default: HIT.

Defines what kind of statistics the counter will count:

HIT	Increment the counter by one each time an event has passed the counter's filter. (See StatCol.<probe>.Counter <counter> Filter <filter> commands).
MINMAX	Increment the counter by one each time the selected EventInfo is within the range Min.<value> and Max.<value>.
ADD	Add the selected EventInfo value to the counter if an event has passed the counter's filter. (See StatCol.<probe>.Counter <counter> Filter <filter> commands)
AND	Increment the counter by one if an event has passed all filters of <probe>.
OR	Increment the counter by one if an event has passed at least one of all filters of <probe>.
REQ	Increment the counter by one each time a request message is detected on any port of <probe>.
RSP	Increment the counter by one each time a response message is detected on any port of <probe>.
ALL	Increment the counter by one each time a response or request message is detected on any port of <probe>.
EXT	Increment the counter by one each time the external event input is sampled high.

See also

- StatCol.<probe>.Counter

Format:	StatCol.<probe>.Counter <counter> Filter <filter> <item>.[<value>   <mask>]
<item>:	MaSTerADDReSS ReaD WRite ERRor REQueSTUserInFo ReSPonSeUserInFo SLaVeADDReSS

Filters out packets which do not comply with the defined item bitmask or value.

MaSTerADDReSS	Master address (NTTP) or MConnId (OCP).
ReaD	Read bit.
WRite	Write bit.
ERRor	Error bit (NTTP only).
REQueSTUserInFo	RequestUserInfo bits (NTTP only).
ReSPonSeUserInFo	ResponseUserInfo bits (NTTP only).
SLaVeADDReSS	Slave address (NTTP only).
<value>	(Hexa)decimal, octal or binary value that defines the required packet item.
<mask> (default: Don't care)	Bitmask of format '0y.....': x = don't care 1 = set 0 = cleared

Example:

MaSTerADDReSS.0yxxxx11	;Only packets with the lower two bits set of ;the master address will pass the filter ;element.
------------------------	---

See also

- StatCol.<probe>.Counter <counter> Filter <filter> MUX
- StatCol.<probe>.Counter <counter> Filter <filter> OFF
- StatCol.<probe>.Counter <counter> Filter <filter> ON
- StatCol.<probe>.Counter

Format:                    StatCol.<probe>.Counter <counter> Filter <filter> MUX <input>

Selects one of the probe’s inputs as the input for the specified filter. Available inputs are depended on the probe.

See also

■ [StatCol.<probe>.Counter <counter> Filter](#)

StatCol.<probe>.Counter <counter> Filter <filter> OFF

Switch filter off

Format:                    StatCol.<probe>.Counter <counter> Filter <filter> OFF

Switches the filter off.

See also

■ [StatCol.<probe>.Counter <counter> Filter](#)

StatCol.<probe>.Counter <counter> Filter <filter> ON

Switch filter on

Format:                    StatCol.<probe>.Counter <counter> Filter <filter> ON

Switches the filter on.

See also

■ [StatCol.<probe>.Counter <counter> Filter](#)

Format:	StatCol.<probe>.Counter <counter> FunCTioN <macro>
<macro>:	OFF AvgPayloadLength THRoughput LnkOcc ArbConf TransUflow IBusy HistPayloadLen HistPresDist HistLatDist AvgLatDist

Macro functions set up the selected probe for common statistics and allow for only few (optional) additional configuration. Therefore they are best suited for users with only little knowledge of the statistics collector or for non-complex statistics tracing scenarios.

Of course macro functions do not make use of the entire feature set of the statistics collector probes. The following limitations apply when using macro functions only:

**Every counter can be assigned to exactly ONE macro function.** A counter can not be used for multiple macro functions. That means that the number of available macro functions depends on the number of available counters of the selected probe. A counter is assigned to a macro function by the StatCol.<probe>.Counter <counter> FunCTioN <macro> command.

**Only the first available filter element of a filter will be used for filtering.** Any second (or third, ...) filter elements of a filter are disabled by default. Advanced users may enable and configure those additional filter elements to set up more complex filtering criteria. This may involve overwriting some configurations made by the macro functions, hence the recommended sequence is to first select the macro function and then to set up additional filtering criteria via the StatCol<probe>.Counter <counter> Filter <element> <item> commands.

OFF

Clears all filters..

Mandatory additional configuration	-
Optional additional configuration	-

# AvgPayloadLength

Average payload length: Outputs the average payload length in bytes of request transfers.

Mandatory additional configuration	StatCol.<probe>.Counter <counter> MUX
Optional additional configuration	StatCol.<probe>.Counter <counter> Filter <element> MaSTerADDRess
	StatCol.<probe>.Counter <counter> Filter <element> SLaVeADDRess
	StatCol.<probe>.Counter <counter> Filter <element> ReaD
	StatCol.<probe>.Counter <counter> Filter <element> WRite
	StatCol.<probe>.Counter <counter> Filter <element> REQUserInfo

# THRoughput

Payload per cycle: Outputs the payload in bytes per cycle.

Mandatory additional configuration	StatCol.<probe>.Counter <counter> MUX
	StatCol.<probe>.CollectTime
Optional additional configuration	StatCol.<probe>.Counter <counter> Filter <element> MaSTerADDRess
	StatCol.<probe>.Counter <counter> Filter <element> SLaVeADDRess
	StatCol.<probe>.Counter <counter> Filter <element> ReaD
	StatCol.<probe>.Counter <counter> Filter <element> WRite
	StatCol.<probe>.Counter <counter> Filter <element> REQUserInfo

# LnkOcc

Link occupancy: Percentage of non-idle cycles.

Mandatory additional configuration	StatCol.<probe>.CollectTime
Optional additional configuration	-

# ArbConf

Arbitration conflicts: Percentage of busy cycles caused by a target which cannot accept further write transactions from the initiator.

Mandatory additional configuration	StatCol.<probe>.CollectTime
Optional additional configuration	-

# TransUflow

Transaction underflow: Percentage of wait cycles (The initiator is not able to send as much data as requested by the target).

Mandatory additional configuration	StatCol.<probe>.CollectTime
Optional additional configuration	StatCol.<probe>.Counter <counter> Filter <element> MaSTerADDRESS StatCol.<probe>.Counter <counter> Filter <element> SLaVeADDRESS StatCol.<probe>.Counter <counter> Filter <element> ReaD StatCol.<probe>.Counter <counter> Filter <element> WRite StatCol.<probe>.Counter <counter> Filter <element> REQUserInfo

# IBusy

Initiator busy: Percentage of busy cycles caused by an initiator which cannot accept further read data from the target.

Mandatory additional configuration	StatCol.<probe>.CollectTime
Optional additional configuration	-



## HistPayloadLen

Histogram of payload length: Filter packets by means of payload length. A histogram can be obtained by assigning the HPL macro to different counters with different min / max values.

Mandatory additional configuration	<b>StatCol.&lt;probe&gt;.Counter &lt;counter&gt; MIN</b> (Minimum payload length in bytes)
	<b>StatCol.&lt;probe&gt;.Counter &lt;counter&gt; MAX</b> (Maximum payload length in bytes)
Optional additional configuration	<b>StatCol.&lt;probe&gt;.Counter &lt;counter&gt; Filter &lt;element&gt; MaSTerADDRess</b>
	<b>StatCol.&lt;probe&gt;.Counter &lt;counter&gt; Filter &lt;element&gt; SLaVeADDRess</b>
	<b>StatCol.&lt;probe&gt;.Counter &lt;counter&gt; Filter &lt;element&gt; ReaD</b>
	<b>StatCol.&lt;probe&gt;.Counter &lt;counter&gt; Filter &lt;element&gt; WRite</b>
	<b>StatCol.&lt;probe&gt;.Counter &lt;counter&gt; Filter &lt;element&gt; REQUserInfo</b>

## HistPresDist

Histogram of pressure distribution: Filter packets by priority. A histogram can be obtained by assigning the HPD macro to different counters with different min / max values.

Mandatory additional configuration	<b>StatCol.&lt;probe&gt;.Counter &lt;counter&gt; MIN</b> (Minimum pressure)
	<b>StatCol.&lt;probe&gt;.Counter &lt;counter&gt; MAX</b> (Maximum pressure)
Optional additional configuration	<b>StatCol.&lt;probe&gt;.Counter &lt;counter&gt; Filter &lt;element&gt; SLaVeADDRess</b>
	<b>StatCol.&lt;probe&gt;.Counter &lt;counter&gt; Filter &lt;element&gt; ReaD</b>
	<b>StatCol.&lt;probe&gt;.Counter &lt;counter&gt; Filter &lt;element&gt; WRite</b>
	<b>StatCol.&lt;probe&gt;.Counter &lt;counter&gt; Filter &lt;element&gt; REQUserInfo</b>

## HistLatDist

Histogram of latency distribution: Filter read packets by latency. A histogram can be obtained by assigning the HistLatDist macro to different counters with different min / max values.

Mandatory additional configuration	<b>StatCol.&lt;probe&gt;.Counter &lt;counter&gt; MIN</b> (Minimum latency)
	<b>StatCol.&lt;probe&gt;.Counter &lt;counter&gt; MAX</b> (Maximum latency)

Optional additional configuration

**StatCol.<probe>.Counter <counter> Filter <element> SLaVeADDRess**  
**StatCol.<probe>.Counter <counter> Filter <element> MaSTerADDRess**  
**StatCol.<probe>.Counter <counter> Filter <element> REQUserInfo**

## AvgLatDist

---

Average latency distribution: Output average latency of read transactions in latency / cycle.

Mandatory additional configuration

-

Optional additional configuration

**StatCol.<probe>.Counter <counter> Filter <element> SLaVeADDRess**  
**StatCol.<probe>.Counter <counter> Filter <element> MaSTerADDRess**  
**StatCol.<probe>.Counter <counter> Filter <element> REQUserInfo**

### See also

---

■ [StatCol.<probe>.Counter](#)

## StatCol Example

---

This example shows how to gather throughput statistics of the EMIF1 request port on an OMAP4. EMIF1 is monitored by the SDRAM probe on OMAP4.

```
StatCol.RESet

CAnalyzer.AutoArm OFF                ; The statistics collector
                                     ; outputs data periodically
                                     ; so we must arm the

CAnalyzer.ARM                        ; CAnalyzer before the
                                     ; statistics collector is
                                     ; activated.

StatCol.SDRAM.Counter 0 FunCTion THroughput

StatCol.SDRAM.Counter 0 Filter MUX.Emif1REQuest

StatCol.SDRAM.CollectTime 255.

StatCol.SDRAM.ON

...

StatCol.SDRAM.OFF                    ; Turn off the statistics
                                     ; collector ...

CAnalyzer.OFF                        ; ... before shutting down
                                     ; the CAnalyzer.

StatColTrace.List CYcle SCC0          ; Display value of counter 0
```

Format:	<b>StatColTrace.</b> <i>&lt;sub_cmd&gt;</i> [ <i>&lt;statcol_channel&gt;...</i> ] [ <i>&lt;channel&gt;...</i> ]
<i>&lt;statcol_channel&gt;</i> :	<b>SCC0.</b> <i>&lt;probe&gt;</i>   <b>SCC1.</b> <i>&lt;probe&gt;</i>   <b>SCC2.</b> <i>&lt;probe&gt;</i>   <b>SCC3.</b> <i>&lt;probe&gt;</i>   <b>SCC4.</b> <i>&lt;probe&gt;</i>

Using the **StatColTrace** command group, you can analyze and display the recorded CMI trace data. The command group consists of the name of the trace source, here **StatCol**, plus the keyword **Trace** of the *<trace>* command group.

<i>&lt;sub_cmd&gt;</i>	<p>For descriptions of the subcommands, please refer to the general <i>&lt;trace&gt;</i> command descriptions in “<a href="#">General Commands Reference Guide T</a>” (general_ref_t.pdf).</p> <p><b>Example:</b> For a description of <b>StatColTrace.List</b>, refer to <a href="#">&lt;trace&gt;.List</a></p>
------------------------	--

<i>&lt;statcol_channel&gt;</i>	The following channels are relevant for the analysis of StatCol trace data:
<i>&lt;probe&gt;</i>	A list of all valid replacements for the placeholder <i>&lt;probe&gt;</i> will be displayed as softkeys in TRACE32 as soon as the dot ‘.’ is entered in the <a href="#">TRACE32 command line</a> .
<b>SCC0.</b> <i>&lt;probe&gt;</i>	Value of statistics collector counter 0.
<b>SCC1.</b> <i>&lt;probe&gt;</i>	Value of statistics collector counter 1.
<b>SCC2.</b> <i>&lt;probe&gt;</i>	Value of statistics collector counter 2.
<b>SCC3.</b> <i>&lt;probe&gt;</i>	Value of statistics collector counter 3.
<b>SCC4.</b> <i>&lt;probe&gt;</i>	Value of statistics collector counter 4.

<i>&lt;channel&gt;</i>	For a description of default channels, see <a href="#">&lt;trace&gt;.List ... &lt;items&gt;</a> .
------------------------	---

Example:

```
; Display trace data
StatColTrace.List CYCLe SCC0 SCC1 SCC2 SCC3
```

See also

- [StatCol](#)

# Generic Subcommands, Parameters, and Options

This section describes the *<generic>* subcommands, parameters, and options that are common to the **SYStem.CONFIG.<component>** commands.

## SYStem.CONFIG.<component>.<generic>

Format:	<b>SYStem.CONFIG.&lt;component&gt;.&lt;generic&gt;</b>
<i>&lt;comp.t&gt;</i> :	<b>CMI   OCP   PMI   SC   STM   CMN</b>
<i>&lt;generic&gt;</i> :	<b>Base</b> <i>&lt;parameter&gt;</i> <b>Name</b> [ <i>&lt;option&gt;</i> ] <b>RESet</b> <b>view</b> [ <i>&lt;parameter&gt;</i> ]

<i>&lt;component&gt;</i>	Click a blue <i>&lt;component&gt;</i> name to jump to the respective <b>SYStem.CONFIG.&lt;component&gt;</b> command: <a href="#">CMI</a> , <a href="#">OCP</a> , <a href="#">PMI</a> , <a href="#">SC</a> , <a href="#">STM</a> , <a href="#">CMN</a> .
<i>&lt;generic&gt;</i>	Generic subcommands of the <b>SYStem.CONFIG.&lt;component&gt;</b> commands.  For descriptions of the generic subcommands, see: <ul style="list-style-type: none"><li>• <a href="#">SYStem.CONFIG.&lt;component&gt;.Base</a></li><li>• <a href="#">SYStem.CONFIG.&lt;component&gt;.Name</a></li><li>• <a href="#">SYStem.CONFIG.&lt;component&gt;.RESet</a></li><li>• <a href="#">SYStem.CONFIG.&lt;component&gt;.view</a></li></ul>

Format:	<b>SYStem.CONFIG.&lt;component&gt;.Base</b> <parameter>
<parameter>:	<b>NONE</b>   <address>

Sets the base <address> of the <component>.

<b>NONE</b>	Removes the base address of the <component>.
-------------	--

Format:	<b>SYStem.CONFIG.&lt;component&gt;.Name</b> <name> [/<option>]
<option>:	<b>CORE</b> <number>   <b>CONTinue</b>

Assigns a user-defined name to a component.

<name>	<b>Parameter Type:</b> <a href="#">String</a> . User-defined names for <components> allow you to distinguish between different instances having the same parameters, such as the same addresses on different buses.
<b>CORE</b>	Sets partial addresses.
<b>CONTinue</b>	Collects calls without triggering any action until the next call without the <b>CONTinue</b> parameter.


Format:	<b>SYStem.CONFIG.&lt;component&gt;.RESet</b>
---------	--

Resets the settings of the <component>.

Format:

**SYStem.CONFIG.<component>.view**

Opens the **SYStem.CONFIG.<component>.view** window, displaying the settings of the <component>.

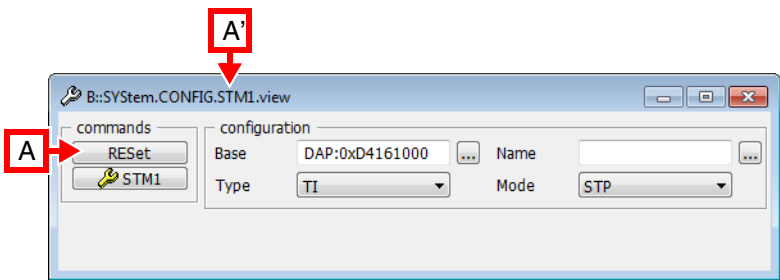

**A** For description of the commands in a **SYStem.CONFIG.<component>.view** window, refer to the subcommands of the respective component.

**Example:** For information about **RESet** for the component **STM**, see [SYStem.CONFIG.<component>.RESet](#).

**FAQ**

Please refer to <https://support.lauterbach.com/kb>.